G950® Integrated Flight Deck

Cockpit Reference Guide for the Vulcanair P68

GARMIN®

FLIGHT INSTRUMENTS
ENGINE INDICATION SYSTEM
NAV/COM/TRANSPONDER/AUDIO PANEL
AUTOMATIC FLIGHT CONTROL SYSTEM
GPS NAVIGATION
FLIGHT PLANNING
PROCEDURES
HAZARD AVOIDANCE
ADDITIONAL FEATURES
ABNORMAL OPERATION
ANNUNCIATIONS & ALERTS
APPENDIX
INDEX

Copyright © 2011 Garmin Ltd. or its subsidiaries. All rights reserved.

This manual reflects the operation of System Software version 0935.32 or later. Some differences in operation may be observed when comparing the information in this manual to earlier or later software versions.

Garmin International, Inc., 1200 East 151st Street, Olathe, Kansas 66062, U.S.A.
Tel: 913/397.8200 Fax: 913/397.8282

Garmin AT, Inc., 2345 Turner Road SE, Salem, OR 97302, U.S.A.
Tel: 503/391.3411 Fax 503/364.2138

Garmin (Europe) Ltd, Liberty House, Bulls Copse Road, Hounsdown Business Park, Southampton, SO40 9RB, U.K.
Tel: 44/0870.8501241 Fax: 44/0870.8501251

Garmin Corporation, No. 68, Jangshu 2nd Road, Shijr, Taipei County, Taiwan
Tel: 886/02.2642.9199 Fax: 886/02.2642.9099

For after-hours emergency, aircraft on ground (AOG) technical support for Garmin panel mount and integrated avionics systems, please contact Garmin's AOG Hotline at 913.397.0836.

Web Site Address: www.garmin.com

Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without the express written permission of Garmin. Garmin hereby grants permission to download a single copy of this manual and of any revision to this manual onto a hard drive or other electronic storage medium to be viewed for personal use, provided that such electronic or printed copy of this manual or revision must contain the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

G950® is a trademark of Garmin Ltd. or its subsidiaries. Garmin®, WATCH®, FliteCharts® and SafeTaxi® are registered trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

NavData® is a registered trademark of Jeppesen, Inc.

AOPA Membership Publications, Inc. and its related organizations (hereinafter collectively "AOPA") expressly disclaim all warranties, with respect to the AOPA information included in this data, express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. The information is provided "as is" and AOPA does not warrant or make any representations regarding its accuracy, reliability, or otherwise. Under no circumstances including negligence, shall AOPA be liable for any incidental, special or

consequential damages that result from the use or inability to use the software or related documentation, even if AOPA or an AOPA authorized representative has been advised of the possibility of such damages. User agrees not to sue AOPA and, to the maximum extent allowed by law, to release and hold harmless AOPA from any causes of action, claims or losses related to any actual or alleged inaccuracies in the information. Some jurisdictions do not allow the limitation or exclusion of implied warranties or liability for incidental or consequential damages so the above limitations or exclusions may not apply to you.

December, 2011 190-01326-00 Rev. A P rinted in the U.S.A.

WARNING: *Navigation and terrain separation must NOT be predicated upon the use of the terrain avoidance feature. The terrain avoidance feature is NOT intended to be used as a primary reference for terrain avoidance and does not relieve the pilot from the responsibility of being aware of surroundings during flight. The terrain avoidance feature is only to be used as an aid for terrain avoidance. Terrain data is obtained from third party sources. Garmin is not able to independently verify the accuracy of the terrain data.*

WARNING: *The displayed minimum safe altitudes (MSAs) are only advisory in nature and should not be relied upon as the sole source of obstacle and terrain avoidance information. Always refer to current aeronautical charts for appropriate minimum clearance altitudes.*

WARNING: *The altitude calculated by G950 GPS receivers is geometric height above Mean Sea Level and could vary significantly from the altitude displayed by pressure altimeters, such as the GDC 74A Air Data Computer, or other altimeters in the aircraft. GPS altitude should never be used for vertical navigation. Always use pressure altitude displayed by the G950 PFD or other pressure altimeters in aircraft.*

WARNING: *Do not use outdated database information. Databases used in the G950 system must be updated regularly in order to ensure that the information remains current. Pilots using any outdated database do so entirely at their own risk.*

WARNING: *Do not use basemap (land and water data) information for primary navigation. Basemap data is intended only to supplement other approved navigation data sources and should be considered as an aid to enhance situational awareness.*

WARNING: *Traffic information shown on the G950 Multi Function Display is provided as an aid in visually acquiring traffic. Pilots must maneuver the aircraft based only upon ATC guidance or positive visual acquisition of conflicting traffic.*

WARNING: *For safety reasons, G950 operational procedures must be learned on the ground.*

WARNING: *The Garmin G950 has a very high degree of functional integrity. However, the pilot must recognize that providing monitoring and/or self-test capability for all conceivable system failures is not practical. Although unlikely, it may be possible for erroneous operation to occur without a fault indication shown by the G950. It is thus the responsibility of the pilot to detect such an occurrence by means of cross-checking with all redundant or correlated information available in the cockpit.*

WARNING: *The United States government operates the Global Positioning System and is solely responsible for its accuracy and maintenance. The GPS system is subject to changes which could affect the accuracy and performance of all GPS equipment. Portions of the Garmin G950 utilize GPS as a precision electronic NAVigation AID (NAVAID). Therefore, as with all NAVAIDs, information presented by the G950 can be misused or misinterpreted and, therefore, become unsafe.*

WARNING: *To reduce the risk of unsafe operation, carefully review and understand all aspects of the G950 Pilot's Guide documentation. Thoroughly practice basic operation prior to actual use. During flight operations, carefully compare indications from the G950 to all available navigation sources, including the information from other NAVAIDs, visual sightings, charts, etc. For safety purposes, always resolve any discrepancies before continuing navigation.*

WARNING: *The illustrations in this guide are only examples. Never use the G950 to attempt to penetrate a thunderstorm. Both the FAA Advisory Circular, Subject: Thunderstorms, and the Aeronautical Information Manual (AIM) recommend avoiding "by at least 20 miles any thunderstorm identified as severe or giving an intense radar echo."*

WARNING: *Lamp(s) inside this product may contain mercury (HG) and must be recycled or disposed of according to local, state, or federal laws. For more information, refer to our website at www.garmin.com/aboutGarmin/environment/disposal.jsp.*

WARNING: *Because of variation in the earth's magnetic field, operating the system within the following areas could result in loss of reliable attitude and heading indications. North of 72° North latitude at all longitudes. South of 70° South latitude at all longitudes. North of 65° North latitude between longitude 75° W and 120° W. (Northern Canada). North of 70° North latitude between longitude 70° W and 128° W. (Northern Canada). North of 70° North latitude between longitude 85° E and 114° E. (Northern Russia). South of 55° South latitude between longitude 120° E and 165° E. (Region south of Australia and New Zealand).*

WARNING: *Do not use GPS to navigate to any active waypoint identified as a 'NON WGS84 WPT' by a system message. 'NON WGS84 WPT' waypoints are derived from an unknown map reference datum that may be incompatible with the map reference datum used by GPS (known as WGS84) and may be positioned in error as displayed.*

CAUTION: *The PFD and MFD displays use a lens coated with a special anti-reflective coating that is very sensitive to skin oils, waxes, and abrasive cleaners. CLEANERS CONTAINING AMMONIA WILL HARM THE ANTI-REFLECTIVE COATING. It is very important to clean the lens using a clean, lint-free cloth and an eyeglass lens cleaner that is specified as safe for anti-reflective coatings.*

CAUTION: *The Garmin G950 does not contain any user-serviceable parts. Repairs should only be made by an authorized Garmin service center. Unauthorized repairs or modifications could void both the warranty and the pilot's authority to operate this device under FAA/FCC regulations.*

NOTE: *All visual depictions contained within this document, including screen images of the G950 panel and displays, are subject to change and may not reflect the most current G950 system and aviation databases. Depictions of equipment may differ slightly from the actual equipment.*

NOTE: *This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.*

NOTE: *The data contained in the terrain and obstacle databases comes from government agencies. Garmin accurately processes and cross-validates the data, but cannot guarantee the accuracy and completeness of the data.*

NOTE: *This product, its packaging, and its components contain chemicals known to the State of California to cause cancer, birth defects, or reproductive harm. This notice is being provided in accordance with California's Proposition 65. If you have any questions or would like additional information, please refer to our web site at www.garmin.com/prop65.*

NOTE: *Interference from GPS repeaters operating inside nearby hangars can cause an intermittent loss of attitude and heading displays while the aircraft is on the ground. Moving the aircraft more than 100 yards away from the source of the interference should alleviate the condition.*

NOTE: *Use of polarized eyewear may cause the flight displays to appear dim or blank.*

NOTE: *The purpose of this Cockpit Reference Guide is to provide the pilot a resource with which to find operating instructions on the major features of the G950 system more easily. It is not intended to be a comprehensive operating guide. Complete operating procedures for the system are found in the G950 Pilot's Guide for this aircraft.*

Part Number	Change Summary
190-01326-00	Initial release.

Revision	Date of Revision	Affected Pages	Description
A	December, 2011	All	Production release

Blank Page

FLIGHT INSTRUMENTS 1
- **Selecting the Altimeter Barometric Pressure Setting** 1
- **Selecting Standard Barometric Pressure (29.92 in Hg)** 1
- **Change Altimeter Barometric Pressure Setting Units** 1
- **Change Navigation Sources** 1
- **Enable/Disable OBS Mode While Navigating with GPS** 2
- **Generic Timer** 2
- **Set Barometric Minimum Descent Altitude** 2
- **Displaying Wind Data** 3
- **Changing HSI Format** 3

ENGINE INDICATION SYSTEM 5
- **Engine Display** 5
- **System Display** 6
- **Lean Display** 8

NAV/COM/TRANSPONDER/AUDIO PANEL 9
- **ADF Tuning (Optional)** 9
- **DME Tuning (Optional)** 9
- **Enter a Transponder Code** 9
- **Selecting a COM Radio** 9
- **Selecting a NAV Radio** 10
- **NAV/COM Tuning** 10
- **Digital Clearance Player** 10
- **Intercom System (ICS) Isolation** 11

AUTOMATIC FLIGHT CONTROL SYSTEM 13
- **S-TEC Fifty Five X Autopilot** 13
- **Altitude Preselect** 13

GPS NAVIGATION 15
- **Direct-to Navigation** 15
- **Activate a Stored Flight Plan** 16
- **Activate a Flight Plan Leg** 16
- **Stop Navigating a Flight Plan** 17
- **Vertical Navigation (VNAV)** 17

FLIGHT PLANNING 19
- **Trip Planning** 19
- **Create a User Waypoint Defined by Latitude & Longitude** 21
- **Create a User Waypoint Defined by Radials from Other Waypoints** 21
- **Create a User Waypoint Defined by a Radial & Distance from Another Waypoint** 23
- **Delete a User Waypoint** 24

Create a Flight Plan 25
Import a Flight Plan from an SD Card 26
Insert a Waypoint in the Active Flight Plan 27
Enter an Airway in a Flight Plan 27
Invert An Active Flight Plan 28
Remove a Departure, Arrival, Approach, or Airway from a Flight Plan 28
Store a Flight Plan 29
Edit a Stored Flight Plan 29
Delete a Waypoint from the Flight Plan 29
Invert and Activate a Stored Flight Plan 30
Copy a Flight Plan 30
Delete a Flight Plan 30
Graphical Flight Plan Creation 31
Export a Flight Plan to an SD Card 31

PROCEDURES 33
Load and Activate a Departure Procedure 33
Activate A Departure Leg 33
Load An Arrival Procedure 33
Activate An Arrival Leg 34
Load and/or Activate an Approach Procedure 34
Activate An Approach in the Active Flight Plan 35
Activate a Vector to Final Approach Fix 36
Activate A Missed Approach in the Active Flight Plan 36

HAZARD AVOIDANCE 37
Customizing the Hazard Displays on the Navigation Map 37
XM WX Satellite Weather (Optional) 37
Traffic Systems 40
Terrain And Obstacle Proximity 42
Terrain-SVS (Optional) 43
Terrain Awareness & Warning System (TAWS-B) Display (Optional) 44
Airborne Color Weather Radar (Optional) 46

ADDITIONAL FEATURES 51
Synthetic Vision (Optional) 51
Terminal Procedure Charts 52
AOPA Airport Directory 54
SiriusXM Satellite Radio Entertainment (Optional) 55
Scheduler 56

ABNORMAL OPERATION 59
- **Reversionary Mode** 59
- **Abnormal COM Operation** 59
- **Hazard Displays with Loss of GPS Position** 59
- **Unusual Attitudes** 60
- **Dead Reckoning** 61

ANNUNCIATIONS & ALERTS 63
- **WARNING Annunciation** 63
- **CAUTION Annunciation** 63
- **Safe Operating Annunciation** 63
- **Alert Message** 64
- **TAWS-B Alerts** 64
- **TAWS-B System Status Annunciations** 66
- **Voice Alerts** 66
- **MFD & PFD Message Advisories** 67
- **Database Message Advisories** 68
- **GMA 1347 Message Advisories** 71
- **GIA 63W Message Advisories** 71
- **GEA 71 Message Advisories** 75
- **GTX 33 Message Advisories** 75
- **GRS 77 Message Advisories** 75
- **GRS 77 Message Advisories** 76
- **GMU 44 Message Advisories** 76
- **GWX 68 Message Advisories** 76
- **GDC 74A Message Advisories** 77
- **GTS 800/820 Message Advisories** 77
- **Miscellaneous Message Advisories** 77
- **Flight Plan Import/Export Messages** 81

APPENDIX 83
- **PFD Softkey Map** 83
- **MFD Softkey Map** 88
- **Loading Updated Databases** 90

INDEX Index-1

Blank Page

FLIGHT INSTRUMENTS

SELECTING THE ALTIMETER BAROMETRIC PRESSURE SETTING

Turn the **BARO** Knob to select the desired setting.

SELECTING STANDARD BAROMETRIC PRESSURE (29.92 IN HG)

1) Press the **PFD** Softkey.
2) Press the **STD BARO** Softkey to set standard barometric pressure.

CHANGE ALTIMETER BAROMETRIC PRESSURE SETTING UNITS

1) Press the **PFD** Softkey to display the second-level softkeys.
2) Press the **ALT UNIT** Softkey.
3) Press the **IN** Softkey to display the barometric pressure setting in inches of mercury (in Hg).

   Or:

   Press the **HPA** Softkey to display the barometric pressure setting in hectopascals.
4) Press the **BACK** Softkey to return to the top-level softkeys.

CHANGE NAVIGATION SOURCES

1) Press the **CDI** Softkey to change from GPS to VOR1 or LOC1. This places the light blue tuning box over the NAV1 standby frequency in the upper left corner of the PFD.
2) Press the **CDI** Softkey again to change from VOR1 or LOC1 to VOR2 or LOC2. This places the light blue tuning box over the NAV2 standby frequency.
3) Press the **CDI** Softkey a third time to return to GPS.

ENABLE/DISABLE OBS MODE WHILE NAVIGATING WITH GPS

1) Press the **OBS** Softkey to select OBS Mode.
2) Turn a **CRS** Knob to select the desired course to/from the waypoint. Press a **CRS** Knob to synchronize the Selected Course with the bearing to the next waypoint.
3) Press the **OBS** Softkey again to disable OBS Mode.

GENERIC TIMER

1) Press the **TMR/REF** Softkey, then turn the large **FMS** Knob to select the time field (hh/mm/ss). Turn the **FMS** Knobs to set the desired time, then press the **ENT** Key. The UP/DOWN field is now highlighted.
2) Turn the small **FMS** Knob to display the UP/DOWN window. Turn the **FMS** Knob to select 'UP' or 'DOWN', then press the **ENT** Key. 'START?' is now highlighted.
3) Press the **ENT** Key to START, STOP, or RESET the timer (if the timer is counting DOWN, it starts counting UP after reaching zero). Press the **CLR** Key or the **TMR/REF** Softkey to remove the window.

SET BAROMETRIC MINIMUM DESCENT ALTITUDE

1) Press the **TMR/REF** Softkey.
2) Turn the large **FMS** Knob to highlight the OFF/BARO field to the right of 'MINIMUMS'.
3) Turn the small **FMS** Knob clockwise to BARO.
4) Press the **ENT** Key.
5) Use the small **FMS** Knob to enter the desired altitude.
6) Press the **ENT** Key.
7) To remove the window, press the **CLR** Key or the **TMR/REF** Softkey.

DISPLAYING WIND DATA

1) Press the **PFD** Softkey.
2) Press the **WIND** Softkey to display wind data to the left of the HSI.
3) Press one of the **OPTN** softkeys to change how wind data is displayed.
4) To remove the Wind Data Window, press the **OFF** Softkey.

CHANGING HSI FORMAT

1) Press the **PFD** Softkey.
2) Press the **HSI FRMT** Softkey.
3) Press the **360 HSI** Softkey to display the full size HSI.

   Or:

   Press the **ARC HSI** Softkey to display the arc style HSI.

Blank Page

ENGINE INDICATION SYSTEM

ENGINE DISPLAY

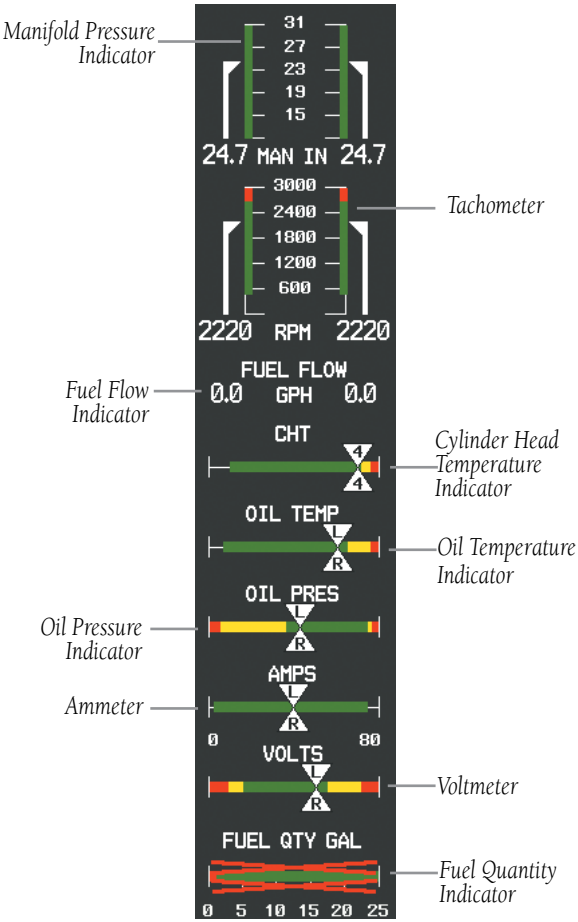

ENGINE Display

SYSTEM DISPLAY

Pressing the **ENGINE** Softkey displays the **SYSTEM** and **LEAN** softkeys. Press the **SYSTEM** Softkey to show the System Display.

Fuel used (GAL USED), endurance (ENDUR), and range (RANGE NM) are all calculated based on the last manual adjustment of the fuel remaining (GAL REM).

Measured fuel quantity has no effect on fuel calculations. Fuel calculations are based on sensed fuel flow and the last manual adjustment of the fuel remaining.

- **DEC FUEL –** Allows the pilot to decrease the gallons of fuel remaining (GAL REM) in 1-gallon increments
- **INC FUEL –** Allows the pilot to increase the gallons of fuel remaining in 1-gallon increments
- **RST FUEL –** Resets the fuel remaining to 76.4 gallons with auxilliary fuel tanks.

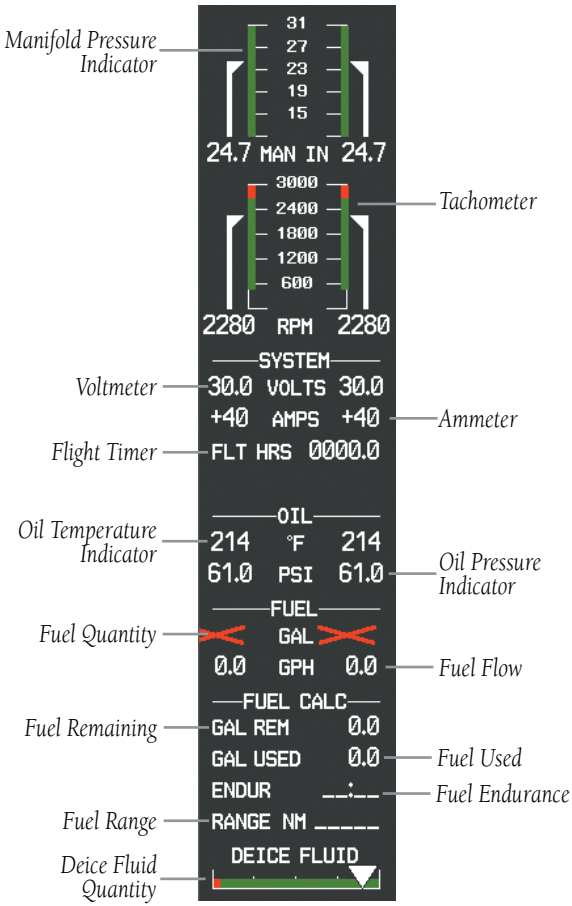

SYSTEM Display

LEAN DISPLAY

Pressing the **ENGINE** Softkey displays the **SYSTEM** and **LEAN** softkeys. Press the **LEAN** Softkey to show the Lean Display.

Pressing the **CYL SLCT** Softkey selects the desired cylinder's EGT to be shown in the digital display. The selected cylinder is also highlighted as a light blue bar graph.

To lean each engine, press the **ASSIST** Softkey. Lean the fuel mixture for the desired engine until the first cylinder peaks, indicated by the cylinder bar graph displayed as light blue and a light blue box being displayed above the bar. Enrich the mixture until the ΔPEAK displays the desired value. This process is performed for each engine.

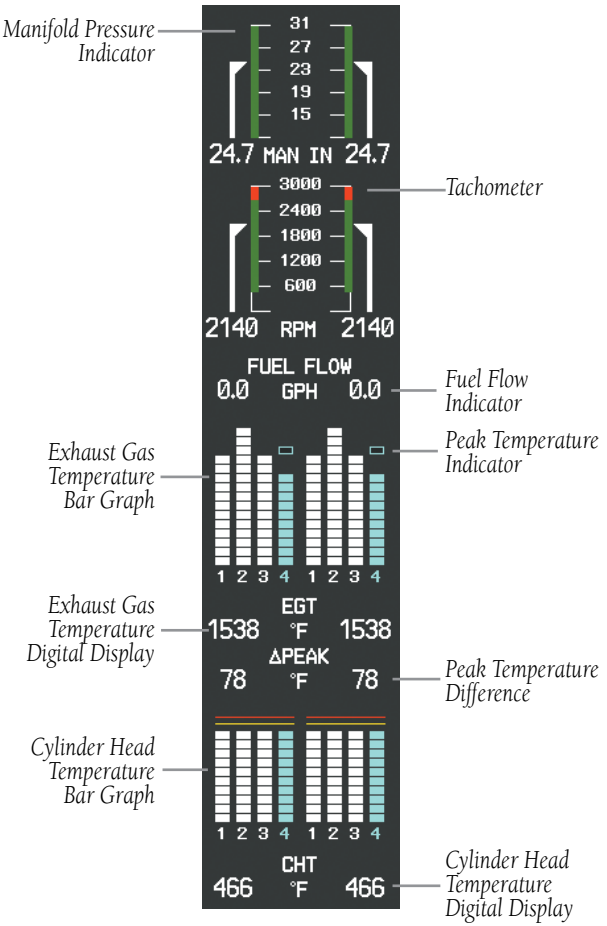

LEAN Display

NAV/COM/TRANSPONDER/AUDIO PANEL

ADF TUNING (OPTIONAL)

Tune the ADF using the remote ADF control head.

DME TUNING (OPTIONAL)

1) Press the **DME** Softkey.
2) Turn the large **FMS** to select the DME source field.
3) Turn the small **FMS** Knob to select the desired Nav radio.
4) Press the **ENT** Key to complete the selection.

ENTER A TRANSPONDER CODE

1) Press the **XPDR** Softkey to display the transponder mode selection softkeys.
2) Press the **CODE** Softkey to display the transponder code selection softkeys, for digit entry.
3) Press the digit softkeys to enter the code in the code field. When entering the code, the next key in sequence must be pressed within 10 seconds, or the entry is cancelled and restored to the previous code. Five seconds after the fourth digit has been entered, the transponder code becomes active.

SELECTING A COM RADIO

Transmit/Receive

Press the **COM1 MIC**, **COM2 MIC**, or **COM3 MIC** Key (optional COM, if installed) on the audio panel.

Receive Only

Press the **COM1**, **COM2**, or **COM3** Key (optional COM, if installed) on the audio panel.

SELECTING A NAV RADIO

1) To begin navigating using a navigation radio, press the **CDI** Softkey on the PFD to select VOR1/LOC1 (NAV1) or VOR2/LOC2 (NAV2).
2) Press the **NAV1**, **NAV2**, **DME**, or **ADF** Key on the audio panel to select or deselect the navigation radio audio source. All radio keys can be selected individually or together.

NAV/COM TUNING

1) Press the small tuning knob to select the desired radio for tuning. A light blue box highlights the radio frequency to be tuned.
2) Turn the respective tuning knobs to enter the desired frequency into the standby frequency field. The large knob enters MHz and the small knob enters kHz.
3) Press the **Frequency Transfer** Key to place the frequency into the active frequency field.

DIGITAL CLEARANCE PLAYER

*NOTE: Only the audio for the selected **COM MIC** Key is recorded. Audio is not recorded for COM3 MIC.*

- Pressing the **PLAY** Key once plays the latest recorded memory block, then returns to normal operation.
- Pressing the **MKR/MUTE** Key while playing a memory block stops play.
- Pressing the **PLAY** Key during play begins playing the previously recorded memory block. Each subsequent press of the **PLAY** Key begins playing the next previously recorded block.

INTERCOM SYSTEM (ICS) ISOLATION

Press the **PILOT** and/or **COPLT** Key on the audio panel to select those isolated from hearing the Nav/Com radios and music.

PILOT KEY Annunciator	COPLT KEY Annunciator	Pilot Hears	Copilot Hears	Passenger Hears
OFF	OFF	Selected radios, aural alerts, pilot, copilot, passengers, music	Selected radios, aural alerts, pilot, copilot, passengers, music	Selected radios, aural alerts, pilot, copilot, passengers, music
ON	OFF	Selected radios, aural alerts, pilot	Copilot, passengers, music	Copilot, passengers, music
OFF	ON	Selected radios, aural alerts, pilot; passengers, music	Copilot	Selected radios, aural alerts, pilot, passengers, music
ON	ON	Selected radios, aural alerts, pilot, copilot	Selected radios, aural alerts, pilot, copilot	Passengers, music

ICS Isolation Modes

Blank Page

AUTOMATIC FLIGHT CONTROL SYSTEM

NOTE: Refer to the Aircraft Flight Manual (AFM) for the installed autopilot.

S-TEC FIFTY FIVE X AUTOPILOT

NOTE: This section covers only the additional 'FD' status annunciations that may appear in the G950 AFCS Status Box. These status annunciations are not analogous to both the G950 and the S-TEC Fifty Five X. Refer to the approved S-TEC Fifty Five X Pilot's Operating Handbook (POH) for comprehensive list of annunciations and operating instructions.

In addition to the redundant status/mode annunciations and/or visual representations that are simultaneously displayed on both the G950 (AFCS Status Box and/or PFD) and the S-TEC Fifty Five X (Autopilot Display and/or Remote Annunciator Display), the G950 displays the additional status/mode annunciation of 'FD' when the Flight Director Mode is engaged.

ALTITUDE PRESELECT

The **ALT** Knob on the PFD is used to enter the selected altitude, which is provided to the S-TEC Fifty Five X.

Blank Page

GPS NAVIGATION

DIRECT-TO NAVIGATION

Direct-to Navigation from the MFD

1) Press the **Direct-to** (D▸) Key.
2) Enter the waypoint identifier.
3) Press the **ENT** Key to confirm the identifier. The 'Activate?' field is highlighted.
4) If no altitude constraint or course is desired, press the **ENT** Key to activate. To enter an altitude constraint, proceed to step 5.
5) Turn the large **FMS** Knob to place the cursor over the 'VNV' altitude field.
6) Enter the desired altitude.
7) Press the **ENT** Key. If the waypoint entered is an airport, the option to select MSL or AGL is now displayed. If the waypoint is not an airport, proceed to step 9.
8) Turn the small **FMS** Knob to select 'MSL' or 'AGL'.
9) Press the **ENT** Key. The cursor is now flashing in the VNV offset distance field.
10) Enter the desired offset distance before (-) the waypoint.
11) Press the **ENT** Key. The 'Activate?' field is highlighted.
12) Press the **ENT** Key to activate.

Direct-to Navigation from the PFD

1) Press the **Direct-to** Key (D▸).
2) Turn the large **FMS** Knob to place the cursor in the desired selection field.
3) Turn the small **FMS** Knob to begin selecting the desired identifier, location, etc.
4) Press the **ENT** Key.
5) The cursor is now flashing on 'ACTIVATE?'. If no altitude constraint or course is desired, press the **ENT** Key to activate. To enter an altitude constraint, proceed to step 6.
6) Turn the large **FMS** Knob to place the cursor over the 'ALT' altitude field.

7) Turn the small **FMS** Knob to enter the desired altitude.
8) Press the **ENT** Key. If the waypoint entered is an airport, the option to select MSL or AGL is now displayed. If the waypoint is not an airport, proceed to step 10.
9) Turn the small **FMS** Knob to select 'MSL' or 'AGL'.
10) Press the **ENT** Key. The cursor is placed in the OFFSET distance field.
11) Turn the small **FMS** Knob to enter the desired target altitude offset from the selected Direct-to.
12) Press the **ENT** Key to highlight 'Activate?' or turn the large **FMS** Knob to highlight the 'CRS' field.
13) Turn the small **FMS** Knob to enter the desired course to the waypoint.
14) Press the **ENT** Key to highlight 'ACTIVATE?'.
15) Press the **ENT** again to activate the Direct-to.

ACTIVATE A STORED FLIGHT PLAN

1) Press the **FPL** Key on the MFD and turn the small **FMS** Knob to display the Flight Plan Catalog Page.
2) Press the **FMS** Knob to activate the cursor.
3) Turn the large **FMS** Knob to highlight the desired flight plan
4) Press the **ACTIVE** Softkey. The confirmation window is now displayed.
5) With 'OK' highlighted, press the **ENT** Key to activate the flight plan. To cancel the flight plan activation, turn the large **FMS** Knob to highlight 'CANCEL' and press the **ENT** Key.

ACTIVATE A FLIGHT PLAN LEG

1) From the Active Flight Plan Page, press the **FMS** Knob to activate the cursor and turn the large **FMS** Knob to highlight the desired waypoint.
2) Press the **ACT LEG** Softkey on the MFD.

   OR
3) Press the **MENU** Key, select the 'Activate Leg' option from the page menu and press the **ENT** Key. This step must be used when activating a leg from the PFD.
4) With 'Activate' highlighted, press the **ENT** Key.

STOP NAVIGATING A FLIGHT PLAN

1) Press the **FPL** Key to display the Active Flight Plan Page.
2) Press the **MENU** Key to display the Page Menu Window.
3) Turn the large **FMS** Knob to highlight 'Delete Flight Plan' and press the **ENT** Key. With 'OK' highlighted, press the **ENT** Key to deactivate the flight plan. This does not delete the stored flight plan, only the active flight plan.

VERTICAL NAVIGATION (VNAV)

The navigation database only contains altitudes for procedures that call for "Cross at" altitudes. If the procedure states "Expect to cross at," the altitude is not in the database. In this case the altitude may be entered manually.

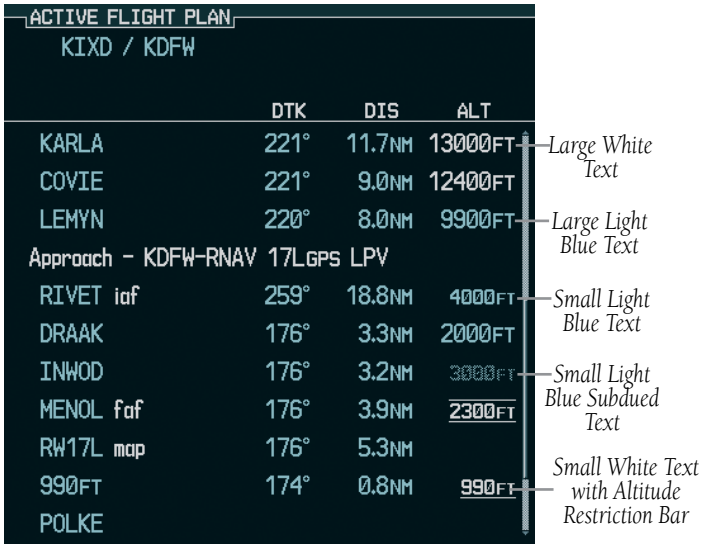

Cross AT or ABOVE 5,000 ft

Cross AT 2,300 ft

Cross AT or BELOW 3,000 ft

Altitudes associated with approach procedures are "auto-designated". This means the system automatically uses the altitudes loaded with the approach for giving vertical flight path guidance outside the FAF. Note these altitudes are displayed as small light blue text.

Altitudes associated with arrival procedures are "manually-designated". This means the system does not use the altitudes loaded with the arrival for giving vertical flight path guidance until designated to do so by the pilot. Note that these altitudes are initially displayed as white text. These altitudes may be "designated" by placing the cursor over the desired altitude and pressing the **ENT** Key. After designation, the text changes to light blue.

Altitudes that have been designated for use in vertical navigation may also be made "non-designated" by placing the cursor over the desired altitude and pressing the **CLR** Key. The altitude is now displayed only as a reference. It is not used to give vertical flight path guidance. Other displayed altitudes may change due to re-calculations or rendered invalid as a result of manually changing an altitude to a non-designated altitude.

	White Text	Light Blue Text	Light Blue Subdued Text
Large Text	Altitude calculated by the system estimating the altitude of the aircraft as it passes over the navigation point. This altitude is provided as a reference and is not designated to be used in determining vertical flight path guidance.	Altitude has been entered by the pilot. Altitude is designated for use in giving vertical flight path guidance. Altitude does not match the published altitude in navigation database or no published altitude exists.	The system cannot use this altitude in determining vertical flight path guidance.
Small Text	Altitude is not designated to be used in determining vertical flight path guidance. Altitude has been retrieved from the navigation database and is provided as a reference.	Altitude is designated for use in giving vertical flight path guidance. Altitude has been retrieved from the navigation database or has been entered by the pilot and matches a published altitude in the navigation database.	The system cannot use this altitude in determining vertical flight path guidance.

FLIGHT PLANNING

TRIP PLANNING

1) Turn the large **FMS** Knob to select the 'AUX' page group.

2) If necessary, turn the small **FMS** Knob to select the Trip Planning Page.

3) The current page mode is displayed at the top of the page: 'AUTOMATIC' or 'MANUAL'. To change the PAGE MODE, press the **AUTO** or **MANUAL** Softkey.

4) For Direct-to planning:

a) Press the **WPTS** Softkey and verify that the starting waypoint field indicates 'P.POS' (present position).

b) If necessary, press the **MENU** Key and select 'Set WPT to Present Position' to display 'P.POS'.

c) Press the **ENT** Key and the flashing cursor moves to the ending waypoint field.

d) Enter the identifier of the ending waypoint and press the **ENT** Key to accept the waypoint.

Or:

For point-to-point planning:

a) Enter the identifier of the starting waypoint.

b) Once the waypoint's identifier is entered, press the **ENT** Key to accept the waypoint. The flashing cursor moves to the ending waypoint.

c) Again, enter the identifier of the ending waypoint.

d) Press the **ENT** Key to accept the waypoint.

Or:

For flight plan leg planning:

a) Press the **FPL** Softkey (at the bottom of the display).

b) Turn the small **FMS** Knob to select the desired flight plan (already stored in memory), by number.

c) Turn the large **FMS** Knob to highlight the 'LEG' field.

d) Turn the small **FMS** Knob to select the desired leg of the flight plan, or select 'CUM' to apply trip planning calculations to the entire flight plan.

Selecting 'FPL 00' displays the active flight plan. If an active flight plan is selected, 'REM' is an available option to display planning data for the remainder of the flight plan.

NOTE: *The page mode must be set to 'MANUAL' to perform the following steps.*

5) Turn the large **FMS** Knob to highlight the departure time (DEP TIME) field.

NOTE: *The departure time on the Trip Planning Page is used for preflight planning. Refer to the Utility Page for the actual flight departure time.*

6) Enter the departure time. Press the **ENT** Key when finished. Departure time may be entered in local or UTC time, depending upon system settings.

7) The flashing cursor moves to the ground speed (GS) field. Enter the ground speed. Press the **ENT** Key when finished. Note that in 'automatic' page mode, ground speed is provided by the system.

8) The flashing cursor moves to the fuel flow field. Enter the fuel flow. Press the **ENT** Key when finished. Note that in 'AUTOMATIC' page mode, fuel flow is provided by the system.

9) The flashing cursor moves to the fuel onboard field. Enter the fuel onboard. Press the **ENT** Key when finished. Note that in 'AUTOMATIC' page mode, fuel onboard is provided by the fuel totalizer.

10) The flashing cursor moves to the calibrated airspeed (CALIBRATED AS) field. Enter the calibrated airspeed. Press the **ENT** Key when finished. Note that in 'AUTOMATIC' page mode, calibrated airspeed is provided by the system.

11) The flashing cursor moves to the altitude (IND ALTITUDE) field. Enter the altitude. Press the **ENT** Key when finished. Note that in 'AUTOMATIC' page mode, altitude is provided by the system.

12) The flashing cursor moves to the barometric setting (PRESSURE) field. Enter the desired baro setting. Press the **ENT** Key when finished. Note that in 'AUTOMATIC' page mode, the baro setting is provided by the setting entered on the PFD.

13) The flashing cursor moves to the air temperature (TOTAL AIR TEMP) field. Enter the desired air temperature. Press the **ENT** Key when finished. Note that in 'AUTOMATIC' page mode, air temperature is provided by the system outside air temperature.

CREATE A USER WAYPOINT DEFINED BY LATITUDE & LONGITUDE

1) Turn the large **FMS** Knob on the MFD to select the 'WPT' page group.
2) Turn the small **FMS** Knob to select the User WPT Information Page.
3) Press the **NEW** Softkey. A waypoint is created at the current aircraft position.
4) Enter the desired waypoint name.
5) Press the **ENT** Key.
6) The cursor is now in the 'WAYPOINT TYPE' field. If desired, the waypoint can be made temporary (deleted automatically when the system is turned off). If the waypoint is to remain in the system, proceed to step 7.
   a) Turn the large **FMS** Knob one click to the left to highlight 'TEMPORARY'.
   b) Press the **ENT** Key to place a check-mark in the box. Turn the large **FMS** Knob to place the cursor back in the 'WAYPOINT TYPE' field.
7) With the cursor in the 'WAYPOINT TYPE' field, turn the small **FMS** Knob to display a list of waypoint types.
8) Turn the small **FMS** Knob to select LAT/LON (latitude and longitude).
9) Press the **ENT** Key.

CREATE A USER WAYPOINT DEFINED BY RADIALS FROM OTHER WAYPOINTS

1) Turn the large **FMS** Knob on the MFD to select the 'WPT' page group.
2) Turn the small **FMS** Knob to select the User WPT Information Page.
3) Press the **NEW** Softkey. A waypoint is created at the current aircraft position.
4) Enter the desired waypoint name.
5) Press the **ENT** Key.
6) The cursor is now in the 'WAYPOINT TYPE' field. If desired, the waypoint can be made temporary (deleted automatically when the system is turned off). If the waypoint is to remain in the system, proceed to step 7.
   a) Turn the large **FMS** Knob one click to the left to highlight 'TEMPORARY'.
   b) Press the **ENT** Key to place a check-mark in the box. Turn the large **FMS** Knob to place the cursor back in the 'WAYPOINT TYPE' field.

7) With the cursor in the 'WAYPOINT TYPE' field, turn the small **FMS** Knob to display a list of waypoint types.

8) Turn the small **FMS** Knob to select RAD/RAD (radial/radial).

9) Press the **ENT** Key.

10) The cursor moves to the 'REFERENCE WAYPOINTS' field. With the first waypoint name highlighted, use the **FMS** Knobs to enter the desired waypoint name. Waypoints may also be selected as follows:

a) When a flight plan is active, turning the small **FMS** Knob to the left will display a list of the flight plan waypoints.

b) Turn the large **FMS** Knob to select the desired waypoint.

c) Press the **ENT** Key.

Or:

a) Turn the small **FMS** Knob to the left. Initially, a flight plan waypoint list is displayed.

b) Turn the small **FMS** Knob to the right to display the 'NRST' airports to the aircraft's current position.

c) Turn the large **FMS** Knob to select the desired waypoint.

d) Press the **ENT** Key.

Or:

a) Turn the small **FMS** Knob to the left. Initially, a flight plan waypoint list is displayed.

b) Turn the small **FMS** Knob to the right to display the 'RECENT' waypoints.

c) Turn the large **FMS** Knob to select the desired waypoint.

d) Press the **ENT** Key.

Or:

a) Turn the small **FMS** Knob to the left. Initially, a flight plan waypoint list is displayed.

b) Turn the small **FMS** Knob to the right to display the 'USER' waypoints.

c) Turn the large **FMS** Knob to select the desired waypoint.

d) Press the **ENT** Key.

11) Press the **ENT** Key. The cursor is displayed in the 'RAD' (radial) field. Enter the desired radial from the reference waypoint.

12) Press the **ENT** Key.

13) Repeat step 10 to enter the next waypoint name.

14) Press the **ENT** Key. The cursor is displayed in the 'RAD' (radial) field for the second waypoint. Enter the desired radial from the reference waypoint.

15) Press the **ENT** Key.

16) Press the **FMS** Knob to remove the flashing cursor.

CREATE A USER WAYPOINT DEFINED BY A RADIAL & DISTANCE FROM ANOTHER WAYPOINT

1) Turn the large **FMS** Knob on the MFD to select the 'WPT' page group.

2) Turn the small **FMS** Knob to select the User WPT Information Page.

3) Press the **NEW** Softkey. A waypoint is created at the current aircraft position.

4) Enter the desired waypoint name.

5) Press the **ENT** Key.

6) The cursor is now in the 'WAYPOINT TYPE' field. If desired, the waypoint can be made temporary (deleted automatically when the system is turned off). If the waypoint is to remain in the system, proceed to step 7.

- **a)** Turn the large **FMS** Knob one click to the left to highlight 'TEMPORARY'.
- **b)** Press the **ENT** Key to place a check-mark in the box. Turn the large **FMS** Knob to place the cursor back in the 'WAYPOINT TYPE' field.

7) With the cursor in the 'WAYPOINT TYPE' field, turn the small **FMS** Knob to display a list of waypoint types.

8) Turn the small **FMS** Knob to select RAD/DIS (radial/distance).

9) Press the **ENT** Key.

10) The cursor moves to the 'REFERENCE WAYPOINTS' field. With the first waypoint name highlighted, use the **FMS** Knobs to enter the desired waypoint name. Waypoints may also be selected as follows:

- **a)** When a flight plan is active, turning the small **FMS** Knob to the left will display a list of the flight plan waypoints.
- **b)** Turn the large **FMS** Knob to select the desired waypoint.
- **c)** Press the **ENT** Key.

Or:

a) Turn the small **FMS** Knob to the left. Initially, a flight plan waypoint list is displayed.

b) Turn the small **FMS** Knob to the right to display the 'NRST' airports to the aircraft's current position.

c) Turn the large **FMS** Knob to select the desired waypoint.

d) Press the **ENT** Key.

Or:

a) Turn the small **FMS** Knob to the left. Initially, a flight plan waypoint list is displayed.

b) Turn the small **FMS** Knob to the right to display the 'RECENT' waypoints.

c) Turn the large **FMS** Knob to select the desired waypoint.

d) Press the **ENT** Key.

Or:

a) Turn the small **FMS** Knob to the left. Initially, a flight plan waypoint list is displayed.

b) Turn the small **FMS** Knob to the right to display the 'USER' waypoints.

c) Turn the large **FMS** Knob to select the desired waypoint.

d) Press the **ENT** Key.

11) Press the **ENT** Key. The cursor is displayed in the 'RAD' (radial) field. Enter the desired radial from the reference waypoint.

12) Press the **ENT** Key.

13) The cursor is now displayed in the 'DIS' (distance) field. Enter the desired distance from the reference waypoint.

14) Press the **ENT** Key.

15) Press the **FMS** Knob to remove the flashing cursor.

DELETE A USER WAYPOINT

1) Turn the large **FMS** Knob to select the 'WPT' page group.

2) Turn the small **FMS** Knob to select the User WPT Information Page.

3) Press the **FMS** Knob to activate the cursor.

4) Turn the large **FMS** Knob to the place the cursor in the 'USER WAYPOINT LIST' field.
5) Turn the small **FMS** Knob to highlight the desired waypoint.
6) Press the **DELETE** Softkey.
7) The message 'Would you like to delete the user waypoint?' is displayed. With 'YES' highlighted, press the **ENT** Key.

CREATE A FLIGHT PLAN

***NOTE:** When creating a flight plan in the Active Flight Plan Window, the first leg is activated automatically after it is created.*

Creating an active flight plan:

1) Press the **FPL** Key.
2) Press the **FMS** Knob to activate the cursor (only on MFD).
3) Turn the small **FMS** Knob to display the Waypoint Information Window. (Turning it clockwise displays a blank Waypoint Information Window, turning it counter-clockwise displays the Waypoint Information Window with a waypoint selection submenu allowing selection of active flight plan, nearest, recent, user, or airway waypoints).
4) Enter the identifier, facility, or city name of the departure waypoint or select a waypoint from the submenu of waypoints and press the **ENT** Key. The active flight plan is modified as each waypoint is entered.
5) Repeat step numbers 3 and 4 to enter each additional flight plan waypoint.
6) When all waypoints have been entered, press the **FMS** Knob to remove the cursor.

Creating a stored flight plan:

1) Press the **FPL** Key.
2) Turn the small **FMS** Knob clockwise to display the Flight Plan Catalog Page.
3) Select the **NEW** Softkey; or press the **MENU** Key, highlight 'Create New Flight Plan', and press the **ENT** Key to display a blank flight plan for the first empty storage location.
4) Turn the small **FMS** Knob to display the Waypoint Information Window. (Turning it clockwise displays a blank Waypoint Information Window, turning it counter-clockwise displays the Waypoint Information Window

with a waypoint selection submenu allowing selection of active flight plan, nearest, recent, user, or airway waypoints).

5) Enter the identifier, facility, or city name of the departure waypoint or select a waypoint from the submenu of waypoints and press the **ENT** Key.

6) Repeat step numbers 4 and 5 to enter each additional flight plan waypoint.

7) When all waypoints have been entered, press the **FMS** Knob to return to the Flight Plan Catalog Page. The new flight plan is now in the list.

IMPORT A FLIGHT PLAN FROM AN SD CARD

NOTE: See the Annunciations & Alerts section for flight plan import message descriptions.

1) Insert the SD card containing the flight plan in the top card slot on the MFD.

2) Press the **FPL** Key on the MFD to display the Active Flight Plan Page.

3) Turn the small **FMS** Knob to select the Flight Plan Catalog Page.

4) Press the **FMS** Knob to activate the cursor.

5) Turn either **FMS** Knob to highlight an empty or existing flight plan.

6) Press the **IMPORT** Softkey.

   If an empty flight plan is selected, a list of the available flight plans on the SD card will be displayed.

   Or:

   If an existing flight plan is selected, an 'Overwrite existing flight plan? OK or CANCEL' prompt is displayed. Press the **ENT** Key to choose to overwrite the selected flight plan and see a list of the available flight plans on the SD card. If overwriting the existing flight plan is not desired, select 'CANCEL' using the **FMS** Knob, press the **ENT** Key, select another existing or empty flight plan, and again press the **IMPORT** Softkey.

7) Turn the small **FMS** Knob to highlight the desired flight plan for importing.

8) Press the **ENT** Key.

INSERT A WAYPOINT IN THE ACTIVE FLIGHT PLAN

1) Press the **FPL** Key to display the active flight plan.
2) If required, press the **FMS** Knob to activate the cursor.
3) Turn the large **FMS** Knob to highlight the desired flight plan waypoint. The new waypoint is inserted before the highlighted waypoint.
4) Turn the small **FMS** Knob. The Waypoint Information Window is now displayed.
5) Enter the new flight plan waypoint by one of the following:
   - **a)** Enter the user waypoint identifier, facility, or city.
   - **b)** Press the **ENT** Key.

   Or:

   - **a)** Turn the small **FMS** Knob to the left. Initially, a flight plan waypoint list is displayed.
   - **b)** Turn the small **FMS** Knob to the right to display the 'NRST' airport waypoints to the aircraft's current position.
   - **c)** Turn the large **FMS** Knob to select the desired waypoint.
   - **d)** Press the **ENT** Key.

   Or:

   - **a)** Turn the small **FMS** Knob to the left. Initially, a flight plan waypoint list is displayed.
   - **b)** Turn the small **FMS** Knob to the right to display the 'RECENT' waypoints.
   - **c)** Turn the large **FMS** Knob to select the desired waypoint.
   - **d)** Press the **ENT** Key.
   - **e)** Press the **ENT** Key again to accept the waypoint.

ENTER AN AIRWAY IN A FLIGHT PLAN

1) Press the **FPL** Key.
2) Press the **FMS** Knob to activate the cursor (not required on the PFD).
3) Turn the large **FMS** Knob to highlight the waypoint after the desired airway entry point. If this waypoint is not a valid airway entry point, a valid entry point should be entered at this time.

4) Turn the small **FMS** Knob one click clockwise and press the **LD AIRWY** Softkey, or press the **MENU** Key and select "Load Airway". The Select Airway Page is displayed. The **LD AIRWY** Softkey or the "Load Airway" menu item is available only when an acceptable airway entry waypoint has been chosen (the waypoint ahead of the cursor position).

5) Turn the **FMS** Knob to select the desired airway from the list, and press the **ENT** Key. Low altitude airways are shown first in the list, followed by "all" altitude airways, and then high altitude airways.

6) Turn the **FMS** Knob to select the desired airway exit point from the list, and press the **ENT** Key. 'LOAD?' is highlighted.

7) Press the **ENT** Key. The system returns to editing the flight plan with the new airway inserted.

INVERT AN ACTIVE FLIGHT PLAN

1) Press the **FPL** Key to display the active flight plan.

2) Press the **MENU** Key to display the Page Menu.

3) Turn the large **FMS** Knob to highlight 'Invert Flight Plan'.

4) Press the **ENT** Key. The original flight plan remains intact in its flight plan catalog storage location.

5) With 'OK' highlighted, press the **ENT** Key to invert the flight plan.

REMOVE A DEPARTURE, ARRIVAL, APPROACH, OR AIRWAY FROM A FLIGHT PLAN

1) Press the **FPL** Key to display the active flight plan. Press the **FMS** Knob to activate the cursor.

   Or, for a stored flight plan:

   a) Press the **FPL** Key on the MFD.

   b) Turn the small **FMS** Knob to select the Flight Plan Catalog Page.

   c) Press the **FMS** Knob to activate the cursor.

   d) Turn the large **FMS** Knob to highlight the desired flight plan.

   e) Press the **EDIT** Softkey.

2) Turn the large **FMS** Knob to highlight the title for the approach, departure, arrival, or airway to be deleted. Titles appear in white directly above the procedure's waypoints.

3) Press the **CLR** Key to display a confirmation window.
4) With 'OK' highlighted, press the **ENT** Key to remove the selected procedure or airway.

STORE A FLIGHT PLAN

1) After creating a flight plan on either the PFD or MFD, it may be saved by pressing the **MENU** Key.
2) Turn the large **FMS** Knob to highlight 'Store Flight Plan' and press the **ENT** Key.
3) With 'OK' highlighted, press the **ENT** Key to store the flight plan.

EDIT A STORED FLIGHT PLAN

1) Press the **FPL** Key on the MFD, then turn the small **FMS** Knob to display the Flight Plan Catalog Page.
2) Press the **FMS** Knob to activate the cursor.
3) Turn the large **FMS** Knob to highlight the desired flight plan.
4) Press the **EDIT** Softkey.
5) Turn the large **FMS** Knob to place the cursor in the desired location.
6) Enter the changes, then press the **ENT** Key.
7) Press the **FMS** Knob to return to the Flight Plan Catalog Page.

DELETE A WAYPOINT FROM THE FLIGHT PLAN

1) Press the **FPL** Key to display the active flight plan. Press the **FMS** Knob to activate the cursor.

   Or, for a stored flight plan:

   a) Press the **FPL** Key on the MFD.
   b) Turn the small **FMS** Knob to select the Flight Plan Catalog Page.
   c) Press the **FMS** Knob to activate the cursor.
   d) Turn the large **FMS** Knob to highlight the desired flight plan.
   e) Press the **EDIT** Softkey.
2) Turn the large **FMS** Knob to highlight the waypoint to be deleted.
3) Press the **CLR** Key to display a 'REMOVE (Wpt Name)?' confirmation window.

4) With 'OK' highlighted, press the **ENT** Key to remove the waypoint. To cancel the delete request, turn the large **FMS** Knob to highlight 'CANCEL' and press the **ENT** Key.

5) Once all changes have been made, press the **FMS** Knob to remove the cursor.

INVERT AND ACTIVATE A STORED FLIGHT PLAN

1) Press the **FPL** Key on the MFD.
2) Turn the small **FMS** Knob to select the Flight Plan Catalog Page.
3) Press the **FMS** Knob to activate the cursor.
4) Turn the large **FMS** Knob to highlight the desired flight plan.
5) Press the **INVERT** Softkey. 'Invert and activate stored flight plan?' is displayed.
6) With 'OK' highlighted, press the **ENT** Key. The selected flight plan is now inverted and activated. The original flight plan remains intact in its flight plan catalog storage location.

COPY A FLIGHT PLAN

1) Press the **FPL** Key on the MFD.
2) Turn the small **FMS** Knob to select the Flight Plan Catalog Page.
3) Press the **FMS** Knob to activate the cursor.
4) Turn the large **FMS** Knob to highlight the flight plan to be copied.
5) Press the **COPY** Softkey. A 'Copy to flight plan #?' confirmation window is displayed.
6) With 'OK' highlighted, press the **ENT** Key to copy the flight plan. To cancel, turn the large **FMS** Knob to highlight 'CANCEL' and press the **ENT** Key.

DELETE A FLIGHT PLAN

1) Press the **FPL** Key on the MFD.
2) Turn the small **FMS** Knob to select the Flight Plan Catalog Page.
3) Press the **FMS** Knob to activate the cursor.
4) Turn the large **FMS** Knob to highlight the flight plan to be deleted.

5) Press the **DELETE** Softkey. A 'Delete flight plan #?' confirmation window is displayed.

6) With 'OK' highlighted, press the **ENT** Key to delete the flight plan. To cancel, turn the large **FMS** Knob to highlight 'CANCEL' and press the **ENT** Key.

GRAPHICAL FLIGHT PLAN CREATION

1) Press the **FPL** Key on the MFD to display the Active Flight Plan Page.

2) Press the **Joystick** to activate the map pointer. Use the **Joystick** to move the pointer to the desired point on the map to be inserted as a waypoint in the flight plan.

3) The default insertion point is at the end of the flight plan. If the selected waypoint is to be placed anywhere other than the end of the flight plan, press the **FMS** Knob to activate the cursor. Waypoints are inserted *ABOVE* the cursor. Turn the large **FMS** Knob to select the desired insertion point.

4) Press the **LD WPT** Softkey. The selected waypoint is inserted at the selected point. The default user waypoint naming is USR000, USR001, USR002, and so on.

5) To change the user waypoint name, follow the procedure for modifying a user waypoint.

EXPORT A FLIGHT PLAN TO AN SD CARD

NOTE: *See the Annunciations & Alerts section for flight plan export message descriptions.*

1) Insert the SD card into the top card slot on the MFD.

2) Press the **FPL** Key to display the Active Flight Plan Page on the MFD.

3) Turn the small **FMS** Knob to select the Flight Plan Catalog Page.

4) Press the **FMS** Knob to activate the cursor.

5) Turn the large **FMS** Knob to highlight the flight plan to be exported.

6) Press the **EXPORT** Softkey.

7) Press the **ENT** Key to confirm the export.

Blank Page

PROCEDURES

LOAD AND ACTIVATE A DEPARTURE PROCEDURE

1) Press the **PROC** Key.
2) Turn the large **FMS** Knob to highlight 'SELECT DEPARTURE'.
3) Press the **ENT** Key. The cursor is displayed in the 'DEPARTURE' field with a list of available departures.
4) Turn the large **FMS** Knob to highlight the desired departure.
5) Press the **ENT** Key. A list of runways may be displayed for the departure. If so, turn either **FMS** Knob to select the desired runway.
6) Press the **ENT** Key. The cursor is displayed in the 'TRANSITION' field with a list of available transitions.
7) Turn the large **FMS** Knob to highlight the desired transition.
8) Press the **ENT** Key.
9) With 'LOAD?' highlighted, press the **ENT** Key. The departure is active when the flight plan is active.

ACTIVATE A DEPARTURE LEG

1) Press the **FPL** Key on the MFD to display the active flight plan.
2) Press the **FMS** Knob to activate the cursor.
3) Turn the large **FMS** Knob to highlight the desired waypoint within the departure.
4) Press the **ACT LEG** Softkey. A confirmation window showing the selected leg is displayed.
5) With 'ACTIVATE' highlighted, press the **ENT** Key.

LOAD AN ARRIVAL PROCEDURE

1) Press the **PROC** Key.
2) Turn the large **FMS** Knob to highlight 'SELECT ARRIVAL'.
3) Press the **ENT** Key. The cursor is displayed in the 'ARRIVAL' field with a list of available arrivals.

4) Turn the large **FMS** Knob to highlight the desired arrival.
5) Press the **ENT** Key. A list of transitions is displayed for the selected arrival.
6) Turn either **FMS** Knob to select the desired transition.
7) Press the **ENT** Key. A list of runways may be displayed for the selected arrival.
8) Turn the large **FMS** Knob to highlight the desired runway.
9) Press the **ENT** Key.
10) With 'LOAD?' highlighted, press the **ENT** Key.
11) The arrival becomes part of the active flight plan.
12) If an altitude associated with a waypoint in an arrival procedure is to be used to calculate vertical guidance perform the following steps:
    a) Press the **FMS** Knob to activate the cursor.
    b) Turn the large **FMS** Knob to highlight the desired waypoint altitude.
    c) Press the **ENT** Key to designate the altitude for use in giving vertical guidance.

ACTIVATE AN ARRIVAL LEG

1) Press the **FPL** Key on the MFD to display the active flight plan.
2) Press the **FMS** Knob to activate the cursor.
3) Turn the large **FMS** Knob to highlight the desired waypoint within the arrival.
4) Press the **ACT LEG** Softkey. A confirmation window showing the selected leg is displayed.
5) With 'ACTIVATE' highlighted, press the **ENT** Key.

LOAD AND/OR ACTIVATE AN APPROACH PROCEDURE

NOTE: *If certain GPS parameters (SBAS, RAIM, etc.) are not available, some published approach procedures for the desired airport may not be displayed in the list of available approaches.*

1) Press the **PROC** Key.
2) Turn the large **FMS** Knob to highlight 'SELECT APPROACH'.

3) Press the **ENT** Key. A list of available approaches for the destination airport is displayed.
4) Turn either **FMS** Knob to highlight the desired approach.
5) Press the **ENT** Key. A list of available transitions for the selected approach procedure is now displayed.
6) Turn either **FMS** Knob to select the desired transition. The "Vectors" option assumes vectors will be received to the final course segment of the approach and will provide navigation guidance relative to the final approach course.
7) Press the **ENT** Key. The cursor moves to the MINIMUMS field.
8) If desired, the DA/MDA for the selected approach procedure may be entered and displayed on the PFD. Turn the small **FMS** Knob in the direction of the green arrow to change the display from OFF to BARO.
9) Press the **ENT** Key. The cursor moves to the altitude field. Turn the small **FMS** Knob to enter the published DA/MDA for the selected approach procedure.
10) Press the **ENT** Key. 'LOAD? or ACTIVATE?' is now displayed with 'LOAD?' highlighted.
11) Turn the large **FMS** Knob to select either 'LOAD?' or 'ACTIVATE?'.

    Selecting 'LOAD?' enters the selected approach procedure into the active flight plan, but is not currently active. Selecting 'ACTIVATE?' enters the selected approach procedure into the active flight plan and activates the first leg of the approach.
12) Press the **ENT** Key.

ACTIVATE AN APPROACH IN THE ACTIVE FLIGHT PLAN

1) Press the **PROC** Key.
2) Turn the large **FMS** Knob to highlight 'ACTIVATE APPROACH'.
3) Press the **ENT** Key.

ACTIVATE A VECTOR TO FINAL APPROACH FIX

1) Press the **PROC** Key.
2) Turn the large **FMS** Knob to highlight 'ACTIVATE VECTOR-TO-FINAL'.
3) Press the **ENT** Key.
4) The final approach course becomes the active leg.

ACTIVATE A MISSED APPROACH IN THE ACTIVE FLIGHT PLAN

1) Press the **PROC** Key.
2) Turn the large **FMS** Knob to highlight 'ACTIVATE MISSED APPROACH'.
3) Press the **ENT** Key. A confirmation window is displayed.
4) With 'ACTIVATE' highlighted, press the **ENT** Key.

   Or:

   Press the Go-around Button.

HAZARD AVOIDANCE

CUSTOMIZING THE HAZARD DISPLAYS ON THE NAVIGATION MAP

1) With the Navigation Map Page displayed, press the **MENU** Key to display the Navigation Map Page Menu. The cursor flashes on the 'Map Setup' option.
2) Press the **ENT** Key. The Map Setup Menu is displayed. Turn the small **FMS** Knob to select 'Traffic' to customize the display of traffic.
3) Press the small **FMS** Knob to return to the Navigation Map Page.

XM WX SATELLITE WEATHER (OPTIONAL)

WARNING: *Use of XM WX Satellite Weather for hazardous weather penetration is not recommended. Weather information provided by SiriusXM Satellite Radio is approved only for weather avoidance, not penetration.*

Displaying XM WX Satellite Weather on the Navigation Map Page

1) Select the **MAP** Softkey.
2) Select the **NEXRAD** or **XM LTNG** Softkey to display the desired weather. Select the applicable softkey again to remove weather data from the Navigation Map Page.

Display METAR and TAF information on the Airport Information Page

1) Turn the large **FMS** Knob to select the WPT Page Group.
2) Turn the small **FMS** Knob to select the Airport Information Page.
3) Select the **WX** Softkey to display METAR and TAF text (METAR and TAF information is updated every 12 minutes).

Displaying Weather on the XM WX Satellite Weather Data Link Page

1) Turn the large **FMS** Knob to select the Map Page Group.
2) Turn the small **FMS** Knob to select the XM Weather Data Link Page.
3) Select the available softkeys to select the desired XM WX Satellite Weather product.
4) Select the **LEGEND** Softkey to view the legends for the selected products. If necessary, turn either **FMS** Knob to scroll through the list. Press the small **FMS** Knob or the **ENT** Key to return to the map.

Map Panning Information – XM Weather Data Link Page

1) Push in the **Joystick** to display the panning arrow.
2) Move the **Joystick** to place the panning arrow on AIRMETs, TFRs, METARs, SIGMETs, PIREPs or AIREPs.
3) Press the **ENT** Key to display pertinent information for the selected product.

   Note that pressing the **ENT** Key when panning over an AIRMET or a SIGMET displays an information box that shows the text of the report. Panning over an airport with METAR information does not display more information but allows the user to press the **ENT** Key and select that Airport's Information Page to display the text of the report. Pressing the **ENT** Key when panning over a TFR displays TFR specific information.

Weather Products and Symbols

Wx Product Status Icons	Description
	NEXRAD - Available for the US and Canada. The age of the displayed data for each is shown at the right.
	ECHO TOP - The age of the displayed data is shown at the right. Not displayed when CLOUD TOP is displayed.
	CLOUD TOP - The age of the displayed data is shown at the right. Not displayed when ECHO TOP is displayed.
	XM LIGHTNING - The age of the displayed data is shown at the right.
	CELL MOVEMENT - The age of the displayed data is shown at the right.
	SIGMET & AIRMET - The age of the displayed data for each is shown at the right.
	METAR - Available for the US and Canada. The age of the displayed data for each is shown at the right.
	SURFACE ANALYSIS with CITY FORECAST - The upper symbol depicts Surface Analysis. The lower symbol depicts City Forecast. The age of the displayed data for each is shown at the right. The selected forecast period is shown at the bottom.

Wx Product Status Icons	Description
	FREEZING LEVEL - The age of the displayed data is shown at the right.
	WINDS ALOFT - Available for the US and Canada. The age of the displayed data for each is shown at the right. The altitude selection is shown at the bottom.
	COUNTY WARNING - The age of the displayed data is shown at the right.
	CYCLONE WARNING - The age of the displayed data is shown at the right.
	AIREP - The age of the displayed data is shown at the right.
	PIREP - The age of the displayed data is shown at the right. Urgent Pireps are displayed in yellow.
	TURBULENCE - The age of the displayed data is shown at the right. The altitude selection is shown at the bottom.
	ICING POTENTIAL - The age of the displayed data is shown at the right. The altitude selection is shown at the bottom.

TRAFFIC SYSTEMS

- If Traffic information Service (TIS) is configured, **STANDBY**, **OPERATE**, and **TNA MUTE** softkeys are displayed.
- If a Traffic Advisory System (TAS) is configured, **STANDBY**, **NORMAL**, **TEST**, and **ALT MODE** softkeys are displayed.

Traffic Symbol	Description
	Non-Threat Traffic (intruder is beyond 5 nm and greater than 1200' vertical separation)
	Proximity Advisory (PA) (Not available with TIS) (intruder is within 5 nm and less than 1200' vertical separation)
	Traffic Advisory (TA) (closing rate, distance, and vertical separation meet TA criteria)
	Traffic Advisory Off Scale
	Traffic Advisory (TA) arrow with ADS-B directional information. Points in the direction of the intruder aircraft track (GTS 800/820 only).
	Proximity Advisory (PA) arrow with ADS-B directional information. Points in the direction of the aircraft track (GTS 800/820 only).
	Non-threat traffic arrow with ADS-B directional information. Points in the direction of the intruder aircraft track (GTS 800/820 only).
	PA or Non-threat traffic arrow with ADS-B directional information, but positional accuracy is degraded. Points in the direction of the aircraft track (GTS 800/820 only).

Traffic Symbol Description

Traffic Information Service (TIS)

NOTE: *If the G950 is configured to use a Traffic Advisory System (TAS), TIS is not available for use.*

NOTE: *Traffic Information Service (TIS) is only available when the aircraft is within the service volume of a TIS capable terminal radar site.*

Displaying Traffic on the Traffic Map Page

1) Turn the large **FMS** Knob to select the Map Page Group.
2) Turn the small **FMS** Knob to select the Traffic Map Page.
3) Press the **OPERATE** Softkey to begin displaying traffic. 'OPERATING' is displayed in the Traffic Mode field.
4) Press the **STANDBY** Softkey to place the system in the Standby Mode. 'STANDBY' is displayed in the Traffic Mode field.
5) Rotate the **Joystick** clockwise to display a larger area or rotate counter-clockwise to display a smaller area.
6) Press the **TNA MUTE** Softkey to mute the "Traffic Not Available" aural alert.

Displaying Traffic on the Navigation Map

1) Ensure TIS is operating. With the Navigation Map displayed, press the **MAP** Softkey.
2) Press the **TRAFFIC** Softkey. Traffic is now displayed on the map.

Traffic Advisory System (TAS) (Optional)

System Self Test

1) Set the range to 2/6 nm.
2) Select the **STANDBY** Softkey.
3) Select the **TEST** Softkey.
4) Self test takes approximately eight seconds to complete. When completed successfully, traffic symbols are displayed and a voice alert "TAS System Test OK" is heard. If the self test fails, the system reverts to Standby Mode and a voice alert "TAS System Test Fail" is heard.

Displaying Traffic on the Traffic Map Page

1) Turn the large **FMS** Knob to select the Map Page Group.
2) Turn the small **FMS** Knob to select the second rectangular page icon.
3) Select the **NORMAL** Softkey to begin displaying traffic. 'OPERATING' is displayed in the Traffic Mode field.
4) Select the **ALT MODE** Softkey to change the altitude volume. Select the desired altitude volume by selecting the **BELOW**, **NORMAL**, **ABOVE**, or

UNREST (unrestricted) Softkey. The selection is displayed in the Altitude Mode field.

5) Select the **STANDBY** Softkey to place the system in the Standby Mode. 'STANDBY' is displayed in the Traffic Mode field.

6) Rotate the **Joystick** clockwise to display a larger area or rotate counter-clockwise to display a smaller area.

7) Select the **FLT ID** Softkey (GTS 800/820 only) to enable or disable Flight ID displayed with the intruder information.

Displaying Traffic on the Navigation Map

1) Ensure TAS is operating.
2) With the Navigation Map displayed, select the **MAP** Softkey.
3) Select the **TRAFFIC** Softkey. Traffic is now displayed on the map.

TERRAIN AND OBSTACLE PROXIMITY

NOTE: Terrain data is not displayed when the aircraft latitude is greater than 75 degrees north or 60 degrees south.

Displaying Terrain and Obstacles on the Terrain Proximity Page

1) Turn the large **FMS** Knob to select the Map Page Group.
2) Turn the small **FMS** Knob to select the last rectangular page icon.
3) If desired, press the **VIEW** Softkey to access the **ARC** and **360** Softkeys. When the **ARC** Softkey is pressed, a radar-like 120° view is displayed. Press the **360** Softkey to return to the 360° default display.
4) Rotate the **Joystick** clockwise to display a larger area or rotate counter-clockwise to display a smaller area.

Color	Terrain/Obstacle Location
Red	Terrain/Obstacle above or within 100' below current aircraft altitude.
Yellow	Terrain/Obstacle between 100' and 1000' below current aircraft altitude.
Black	Terrain/Obstacle is more than 1000' below aircraft altitude.

Displaying Terrain and Obstacles on the Navigation Map

1) With the Navigation Map displayed, press the **MAP** Softkey.
2) Press the **TERRAIN** Softkey. Terrain and obstacle proximity will now be displayed on the map.

TERRAIN-SVS (OPTIONAL)

NOTE: *Terrain-SVS is only available when the Synthetic Vision System (SVS) option is installed and the TAWS option has not been installed.*

NOTE: *Terrain data is not displayed when the aircraft latitude is greater than 75 degrees north or 60 degrees south.*

Display Terrain on the TERRAIN-SVS Page

1) Turn the large **FMS** Knob to select the Map Page Group.
2) Turn the small **FMS** Knob to select the Terrain-SVS Page.
3) If desired, select the **VIEW** Softkey to access the **ARC** and **360** softkeys. When the **ARC** Softkey is selected, a radar-like 120° view is displayed. Select the **360** Softkey to return to the 360° default display.
4) Rotate the **Joystick** clockwise to display a larger area or rotate counter-clockwise to display a smaller area.

Color	Terrain/Obstacle Location
Red	Terrain/Obstacle above or within 100' below current aircraft altitude.
Yellow	Terrain/Obstacle between 100' and 1000' below current aircraft altitude.
Black	Terrain/Obstacle is more than 1000' below aircraft altitude.

Enable/Disable Aviation Data

1) While the Terrain-SVS Page is displayed, press the **MENU** Key.
2) Turn the small **FMS** Knob to select "Show (or Hide) Aviation Data".
3) Press the **ENT** Key.

Terrain-SVS Inhibit

Inhibit Terrain

While the Terrain-SVS Page is displayed, select the **INHIBIT** Softkey.

Or:

1) Press the **MENU** Key.
2) Turn the small **FMS** Knob to select 'Inhibit Terrain'.
3) Press the **ENT** Key.

Enable Terrain

While the Terrain-SVS Page is displayed, select the **INHIBIT** Softkey.

Or:

1) While the Terrain-SVS Page is displayed, press the **MENU** Key.
2) Turn the small **FMS** Knob to select 'Enable Terrain'.
3) Press the **ENT** Key.

NOTE: *If Terrain-SVS alerts are inhibited when the Final Approach Fix is the active waypoint in a GPS SBAS approach, a LOW ALT annunciation may appear on the PFD next to the altimeter if the current aircraft altitude is at least 164 feet below the prescribed altitude at the Final Approach Fix.*

TERRAIN AWARENESS & WARNING SYSTEM (TAWS-B) DISPLAY (OPTIONAL)

NOTE: *Terrain data is not displayed when the aircraft latitude is greater than 75 degrees north or 60 degrees south.*

Manual System Test

1) While the TAWS-B Page is displayed, press the **MENU** Key.
2) Turn the small **FMS** Knob to select 'Test TAWS'.
3) Press the **ENT** Key. During the test 'TAWS TEST' is displayed in the center of the TAWS-B Page.

   When all is in working order, "TAWS System Test, OK" is heard.

Display Terrain on the TAWS-B Page

1) Turn the large **FMS** Knob to select the Map Page Group.
2) Turn the small **FMS** Knob to select the TAWS-B Page.
3) If desired, press the **VIEW** Softkey to access the **ARC** and **360** softkeys. When the **ARC** Softkey is selected, a radar-like 120° view is displayed. Press the **360** Softkey to return to the 360° default display.
4) Rotate the **Joystick** clockwise to display a larger area or rotate counter-clockwise to display a smaller area.

Color	Terrain/Obstacle Location
Red	Terrain/Obstacle above or within 100' below current aircraft altitude.
Yellow	Terrain/Obstacle between 100' and 1000' below current aircraft altitude.
Black	Terrain/Obstacle is more than 1000' below aircraft altitude.

Enable/Disable Aviation Data

1) While the TAWS-B Page is displayed, press the **MENU** Key.
2) Turn the small **FMS** Knob to select "Show (or Hide) Aviation Data".
3) Press the **ENT** Key.

TAWS Inhibit

Inhibit TAWS

While the TAWS-B Page is displayed, press the **INHIBIT** Softkey.

Or:

1) Press the **MENU** Key.
2) Turn the small **FMS** Knob to select 'Inhibit TAWS'.
3) Press the **ENT** Key.

Enable TAWS

While the TAWS-B Page is displayed, press the **INHIBIT** Softkey.

Or:

1) While the TAWS-B Page is displayed, press the **MENU** Key.
2) Turn the small **FMS** Knob to select 'Enable TAWS'.
3) Press the **ENT** Key.

NOTE: If TAWS alerts are inhibited when the Final Approach Fix is the active waypoint in a GPS SBAS approach, a LOW ALT annunciation may appear on the PFD next to the altimeter if the current aircraft altitude is at least 164 feet below the prescribed altitude at the Final Approach Fix.

AIRBORNE COLOR WEATHER RADAR (OPTIONAL)

WARNING: Begin transmitting only when it is safe to do so. If it is desired to transmit while the aircraft is on the ground, no personnel or objects should be within 11 feet of the antenna.

CAUTION: In Standby Mode, the antenna is parked at the center line. It is always a good idea to put the radar in Standby Mode before taxiing the aircraft to prevent the antenna from bouncing on the bottom stop and possibly causing damage to the radar assembly.

Displaying Weather on the Weather Radar Page

1) Turn the large **FMS** Knob to select the Map Page Group.
2) Turn the small **FMS** Knob to select the Weather Radar Page.
3) Press the **MODE** Softkey.
4) If the aircraft is on the ground, press the **STANDBY** Softkey to initiate the one minute warm-up period. After the warm-up is complete, the radar enters Standby Mode. After the aircraft is airborne, press the **WEATHER** Softkey.

   Or:

   If the aircraft is already airborne, press the **WEATHER** or **GROUND** Softkey. The one-minute warm-up period is initiated, after which the radar begins transmitting. The horizontal scan is initially displayed.
5) Turn the **Joystick** to select the desired range.
6) If desired, press the **VERTICAL** Softkey for vertical scanning.

Adjusting Antenna Tilt

Move the **Joystick** up or down to adjust the tilt of the antenna up or down. Monitor the displayed tilt value in the TILT field.

When scanning vertically, a Tilt Line may be displayed to aid in positioning the tilt of the antenna. If the Tilt Line is not displayed, perform the following steps:

1) Press the **MENU** Key
2) Turn the large **FMS** Knob to select 'Show Tilt Line'.
3) Press the **ENT** Key.

Adjusting Antenna Bearing

Move the **Joystick** right or left to adjust the azimuth position of the antenna right or left. Monitor the displayed bearing value in the BEARING field.

When scanning horizontally, a Bearing Line may be displayed to aid in positioning the antenna for the vertical scan. If the Bearing Line is not displayed, perform the following steps:

1) Press the **MENU** Key
2) Turn the large **FMS** Knob to select 'Show Bearing Line'.
3) Press the **ENT** Key.

Vertically Scan a Storm Cell

1) While in the Horizontal Scan view, move the **Joystick** to place the Bearing Line on the desired storm cell, or other area, to be vertically scanned.
2) Press the **VERTICAL** Softkey. A vertical 'slice' of the selected area is now displayed.
3) Move the **Joystick** right or left to move the scanned "slice" a few degrees right or left.
4) Turn the **Joystick** to adjust the range.
5) To select a new area to be vertically scanned, press the **HORIZON** Softkey to return to the Horizontal Scan view and repeat the previous steps.

Adjusting Gain

WARNING: *Changing the gain in Weather Mode causes precipitation intensity to be displayed as a color not representative of the true intensity. Remember to return the gain setting to 'Calibrated' for viewing the actual intensity of precipitation.*

1) Press the **GAIN** Softkey to activate the cursor in the 'GAIN' field.
2) Turn the small **FMS** Knob to adjust the gain for the desirable level. The gain setting is visible in the gain field as a movable horizontal bar in a flashing box. The line pointer is a reference depicting the calibrated position.
3) Press the **FMS** Knob to remove the cursor.
4) Press the **GAIN** Softkey again to recalibrate the gain. 'CALIBRATED' is displayed in the 'GAIN' field.

Ground Mapping

1) Press the **MODE** Softkey.
2) Press the **GROUND** Softkey to place the radar in Ground Map Mode.
3) Press the **BACK** Softkey.

Sector Scan

1) While in the Horizontal Scan Mode, move the **Joystick** right or left to place the Bearing Line in the desired position. The location of the Bearing Line becomes the center point of the Sector Scan.
2) Press the **FMS** Knob to display the cursor.
3) Turn the large **FMS** Knob to place the cursor in the SECTOR SCAN field.
4) Turn the small **FMS** Knob to select FULL, 60˚, 40˚, or 20˚ scan.
5) If desired, readjust the Bearing Line with the **Joystick** to change the center of the Sector Scan.
6) Press the **FMS** Knob to remove the cursor.

Antenna Stabilization

1) To activate or deactivate the antenna stabilization, press the **MODE** Softkey.
2) Press the **STAB ON** Softkey to activate antenna stabilization or press the **STAB OFF** Softkey to deactivate. The current stabilization condition is shown in the upper right of the weather radar display.

Weather Attenuated Color Highlight (WATCH®)

To activate or deactivate the WATCH® feature, press the **WATCH** Softkey. This feature is only available in the Horizontal Scan Mode.

Weather Alert

To activate or deactivate Weather Alert, press the **WX ALRT** Softkey. Activating and deactivating also enables or inhibits the alert on the PFD.

Automatic Standby

When the weather radar system is in the Weather or Ground Map Mode, upon landing the system automatically switches to Standby Mode.

Blank Page

ADDITIONAL FEATURES

SYNTHETIC VISION (OPTIONAL)

WARNING: *Use appropriate primary systems for navigation, and for terrain, obstacle, and traffic avoidance. SVS is intended as an aid to situational awareness only and may not provide either the accuracy or reliability upon which to solely base decisions and/or plan maneuvers to avoid terrain, obstacles, or traffic.*

WARNING: *Do not use SVS runway depiction as the sole means for determining the proximity of the aircraft to the runway or for maintaining the proper approach path angle during landing.*

Synthetic Vision System (SVS) functionality is offered as an optional enhancement to the G950 system.

SVS is primarily comprised of a computer-generated forward-looking, attitude aligned view of the topography immediately in front of the aircraft from the pilot's perspective. SVS information is shown on the primary flight display (PFD).

In addition to SVS enhancement to the PFD, the following features have been added to the PFD:

- Pathways
- Flight Path Marker
- Horizon Heading Marks
- Terrain and Obstacle Alerting
- Three-dimensional Traffic
- Airport Signs
- Runway Display

Displaying SVS Terrain

1) Select the **PFD** Softkey.
2) Select the **SYN VIS** Softkey.
3) Select the **SYN TERR** Softkey.
4) Select the **BACK** Softkey to return to the previous page.

Displaying Pathways

1) Select the **PFD** Softkey.
2) Select the **SYN VIS** Softkey.
3) If not already enabled, select the **SYN TERR** Softkey.
4) Select the **PATHWAY** Softkey.
5) Select the **BACK** Softkey to return to the previous page.

Displaying Heading on the Horizon

1) Select the **PFD** Softkey.
2) Select the **SYN VIS** Softkey.
3) If not already enabled, select the **SYN TERR** Softkey.
4) Select the **HRZN HDG** Softkey.
5) Select the **BACK** Softkey to return to the previous page.

Displaying Airport Signs

1) Select the **PFD** Softkey.
2) Select the **SYN VIS** Softkey.
3) If not already enabled, select the **SYN TERR** Softkey.
4) Select the **APTSIGNS** Softkey.
5) Select the **BACK** Softkey to return to the previous page.

TERMINAL PROCEDURE CHARTS

NOTE: With the availability of SafeTaxi®, ChartView, or FliteCharts®, it may be necessary to carry another source of charts on-board the aircraft.

SafeTaxi®

SafeTaxi® is an enhanced feature that gives greater map detail as the map range is adjusted in on the airport. The airport display on the map reveals runways with numbers, taxiways identifiers, and airport landmarks including ramps, buildings, control towers, and other prominent features. Resolution is greater at lower map ranges. The aircraft symbol provides situational awareness while taxiing.

Selecting the **DCLTR** Softkey (declutter) once removes the taxiway markings and airport identification labels. Selecting the **DCLTR** Softkey twice removes VOR station

ID, the VOR symbol, and intersection names if within the airport plan view. Selecting the **DCLTR** Softkey a third time removes the airport runway layout, unless the airport in view is part of an active route structure. Selecting the **DCLTR** Softkey again cycles back to the original map detail.

The SafeTaxi database contains detailed airport diagrams for selected airports. These diagrams provide the pilot with situational awareness by displaying the aircraft position in relation to taxiways, ramps, runways, terminals, and services. This information should not be used by the pilot as the basis for maneuvering the aircraft on the ground. This database is updated on a 56-day cycle.

ChartView (Optional)

ChartView resembles the paper version of Jeppesen terminal procedures charts. The charts are displayed in full color with high-resolution. The MFD depiction shows the aircraft position on the moving map in the plan view of most approach charts and on airport diagrams.

The ChartView database is updated on a 14-day cycle. If the ChartView database is not updated within 70 days of the expiration date, ChartView will no longer function.

FliteCharts® (Optional)

FliteCharts® resemble the paper version of AeroNav Services terminal procedures charts. The charts are displayed with high-resolution and in color for applicable charts. Current aircraft position is not displayed on FliteCharts.

The FliteCharts database contains procedure charts for the United States only. This database is updated on a 28-day cycle. If not updated within 180 days of the expiration date, FliteCharts will no longer function.

View Charts from the Navigation Map Page

1) Select the **SHW CHRT** Softkey when displayed.

   Or:

   Move the map pointer to point to a desired point on the map and select the **SHW CHRT** Softkey.

2) Select the **DP, STAR, APR, WX,** and **NOTAM** softkeys to access charts for departures, arrivals, approaches, weather and NOTAMs Note that NOTAMS are only available with ChartView.

3) Select the **GO BACK** Softkey to return to the previous page.

View Charts from the Active Flight Plan Page

1) While viewing the Active Flight Plan Page, press the **FMS** Knob to activate the cursor.
2) Turn the large **FMS** Knob to select the departure airport, destination airport, departure, arrival, or approach.
3) Select the **SHW CHRT** Softkey. The appropriate chart is displayed, if available for the item selected.
4) Select the **GO BACK** Softkey to return to the previous page.

Change Day/Night View

1) While viewing a chart press the **MENU** Key to display the Page Menu OPTIONS.
2) Turn the large **FMS** Knob to highlight the 'Chart Setup' Menu Option and press the **ENT** Key.
3) Turn the large **FMS** Knob to move between the 'FULL SCREEN' and 'COLOR SCHEME' Options.
4) Turn the small **FMS** Knob to choose between the 'On' and 'Off' Full Screen Options.
5) Turn the small **FMS** Knob to choose between 'Day', 'Auto', and 'Night' Options.
6) In Auto Mode, turn the large **FMS** Knob to select the percentage field and change percentage with the small **FMS** Knob. The percentage of change is the day/night crossover point based on backlighting intensity.
7) Press the **FMS** Knob when finished to remove the Chart Setup Menu.

AOPA AIRPORT DIRECTORY

AOPA Airport Directory adds enhanced airport information when viewing airports on the WPT-Airport Information Page.

This database is updated four times per year. Check fly.garmin.com for the current database.

View Airport Directory Information

While viewing the WPT-Airport Information Page, if necessary, select the **INFO-1** Softkey to change the softkey label to display **INFO-2**. AOPA airport information is displayed on the right half of the display.

SIRIUSXM SATELLITE RADIO ENTERTAINMENT (OPTIONAL)

The XM Radio Page provides information and control of the audio entertainment features of the SiriusXM Satellite Radio.

Selecting the XM Radio Page

1) Turn the large **FMS** Knob to select the Auxiliary Page Group.
2) Turn the small **FMS** Knob to select XM Radio.
3) Select the **RADIO** Softkey to show the XM Radio Page where audio entertainment is controlled.

Active Channel and Channel List

The Active Channel Box on the XM Radio Page displays the currently selected channel. The Channels List Box of the XM Radio Page shows a list of the available channels for the selected category.

Selecting a Category

The Category Box of the XM Radio Page displays the currently selected category of audio.

1) Select the **CATGRY** Softkey on the XM Radio Page.
2) Select the **CAT +** and **CAT -** softkeys to cycle through the categories.

   Or:

   Turn the small **FMS** Knob to display the 'Categories' list. Highlight the desired category with the small **FMS** Knob.
3) Press the **ENT** Key.

Select an Available Channel within the Selected Category

1) While on the XM Radio Page, select the **CHNL** Softkey.
2) Select the **CH +** Softkey to go down through the list in the Channel Box, or move up the list with the **CH –** Softkey.

   Or:

   Press the **FMS** Knob to highlight the channel list and turn the large **FMS** Knob to scroll through the channels.
3) With the desired channel highlighted, press the **ENT** Key.

Entering a Channel Directly

1) While on the XM Radio Page, select the **CHNL** Softkey.
2) Select the **DIR CH** Softkey. The channel number in the Active Channel Box is highlighted.
3) Select the numbered softkeys located on the bottom of the display to directly select the desired channel number.
4) Press the **ENT** Key to activate the selected channel.

Assigning Channel Presets

Up to 15 channels from any category can be assigned a preset number.

1) On the XM Radio Page, with the desired channel active, select the **PRESETS** Softkey to access the first five preset channels (**PS1 - PS5**).
2) Select the **MORE** Softkey to access the next five channels (**PS6 – PS10**), and again to access the last five channels (**PS11 – PS15**). Selecting the **MORE** Softkey repeatedly cycles through the preset channels.
3) Select the **SET** Softkey.
4) Select any one of the (**PS1 - PS15**) softkeys to assign a number to the active channel.

Adjusting Volume

1) With the XM Radio Page displayed, select the **VOL** Softkey.
2) Select the **VOL –** Softkey to reduce volume or select the **VOL +** Softkey to increase volume. (Once the **VOL** Softkey is selected, the volume can also be adjusted using the small **FMS** Knob.)
3) Select the **MUTE** Softkey to mute the audio. Select the **MUTE** Softkey again to unmute the audio.

SCHEDULER

Scheduler messages appear in the Alerts Window on the PFD. When a scheduler message is waiting, the **ALERTS** Softkey label changes to ADVISORY. Pressing the **ADVISORY** Softkey opens the Alerts Window and acknowledges the scheduler message. The softkey label reverts to ALERTS when pressed, the Alerts Window is removed from the display, and the scheduler message is deleted from the message queue.

Message timers set to periodic alerting automatically reset to the original timer value once the message is displayed. When power is cycled, all messages are retained until deleted, and message timer countdown is resumed.

Enter a Scheduler Message

1) Select the AUX - Utility Page.
2) Press the **FMS** Knob momentarily to activate the flashing cursor.
3) Turn the large **FMS** Knob to highlight the first empty scheduler message naming field.
4) Use the **FMS** Knob to enter the message text to be displayed in the Alerts Window and press the **ENT** Key.
5) Press the **ENT** Key again or use the large **FMS** Knob to move the cursor to the field next to Type.
6) Turn the small **FMS** Knob to select the message alert type:
   - Event—Message issued at the specified date/time
   - One-time—Message issued when the message timer reaches zero (default setting)
   - Periodic—Message issued each time the message timer reaches zero
7) Press the **ENT** Key again or use the large **FMS** Knob to move the cursor to the next field.
8) For periodic and one-time message, use the **FMS** Knob to enter the timer value (HH:MM:SS) from which to countdown and press the **ENT** Key.
9) For event-based messages:
   a) Use the **FMS** Knob to enter the desired date (DD-MM-YY) and press the **ENT** Key.
   b) Press the **ENT** Key again or use the large **FMS** Knob to move the cursor to the next field.
   c) Use the **FMS** Knob to enter the desired time (HH:MM) and press the **ENT** Key.
10) Press the **ENT** Key again or use the large **FMS** Knob to move the cursor to enter the next message.

Delete a Scheduler Message

1) Select the AUX - Utility Page.
2) Press the **FMS** Knob momentarily to activate the flashing cursor.
3) Turn the large **FMS** Knob to highlight the name field of the scheduler message to be deleted.
4) Press the **CLR** Key to clear the message text. If the **CLR** Key is pressed again, the message is restored.
5) Press the **ENT** Key while the message line is cleared to clear the message time.

ABNORMAL OPERATION

REVERSIONARY MODE

Should a system detected failure occur in either display, the G950 automatically enters reversionary mode. In reversionary mode, critical flight instrumentation is combined with engine instrumentation on the remaining display.

Reversionary display mode can be manually activated by pressing the **Display Backup** Button on the audio panel.

NOTE: *The Pilot's Operating Handbook (POH) and/or Airplane Flight Manual (AFM) always takes precedence over the information found in this section.*

ABNORMAL COM OPERATION

When a COM tuning failure is detected by the system, the emergency frequency (121.500 MHz) is automatically loaded into the active frequency field of the COM radio for which the tuning failure was detected. In the event of a failure of both PFDs, the emergency frequency (121.500 MHz) automatically becomes the active frequency on both COM radios.

HAZARD DISPLAYS WITH LOSS OF GPS POSITION

If GPS position is lost, or becomes invalid, selected hazards being displayed on the Navigation Map Page are removed until GPS position is again established.

Loss of Hazard Functions with Loss of GPS Position

UNUSUAL ATTITUDES

The PFD 'declutters' when the aircraft enters an unusual attitude. Only the primary functions are displayed in these situations.

The following information is removed from the PFD (and corresponding softkeys are disabled) when the aircraft experiences unusual attitudes:

- Traffic Annunciations
- AFCS Annunciations
- Flight director Command Bars
- Inset Map
- Temperatures
- DME Information Window
- Wind Data
- Selected Heading Box
- Selected Course Box
- Transponder Status Box
- System Time
- PFD Setup Menu
- Windows displayed in the lower right corner of the PFD:
  - Timer/References
  - Nearest Airports
  - Flight Plan
  - Messages
  - Procedures
  - DME Tuning
- Barometric Minimum Descent Altitude Box
- Glideslope, Glidepath, and Vertical Deviation Indicators
- Altimeter Barometric Setting
- Selected Altitude
- VNV Target Altitude

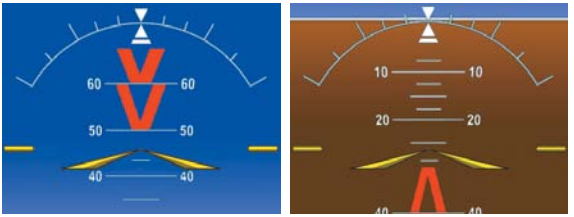

Extreme Pitch Indication

DEAD RECKONING

While in Enroute or Oceanic phase of flight, if the G950 detects an invalid GPS solution or is unable to calculate a GPS position, the system automatically reverts to Dead Reckoning (DR) Mode. In DR Mode, the G950 uses its last-known position combined with continuously updated airspeed and heading data (when available) to calculate and display the aircraft's current estimated position.

NOTE: *Dead Reckoning Mode only functions in Enroute (ENR) or Oceanic (OCN) phase of flight. In all other phases, an invalid GPS solution produces a "NO GPS POSITION" annunciation on the map and the G950 stops navigating in GPS Mode.*

DR Mode is indicated on the G950 by the appearance of the letters 'DR' superimposed in yellow over the 'own aircraft' symbol as shown in the following figure. In addition, 'DR' is prominently displayed, also in yellow, on the HSI slightly above and to the right of the aircraft symbol on the CDI as shown in the following figure. The CDI deviation bar is displayed in yellow, but will be removed from the display after 20 minutes. Lastly, but at the same time, a 'GPS NAV LOST' alert message appears on the PFD.

Normal navigation using GPS/SBAS source data resumes automatically once a valid GPS solution is restored.

It is important to note that estimated navigation data supplied by the G950 in DR Mode may become increasingly unreliable and must not be used as a sole means of navigation. If, while in DR Mode, airspeed and/or heading data is also lost or not available, the DR function may not be capable of estimating your position and, consequently, the system may display a path that is different than the actual movement of the aircraft. Estimated position information displayed by the G950 through DR while there is no heading and/or airspeed data available should not be used for navigation.

DR Mode is inherently less accurate than the standard GPS/SBAS Mode due to the lack of satellite measurements needed to determine a position. Changes in wind speed and/or wind direction compounds the relative inaccuracy of DR Mode. Because of this degraded accuracy, the crew must maintain position awareness using other navigation equipment until GPS-derived position data is restored.

CDI 'DR' Indication on PFD

Symbolic Aircraft
(Map pages and Inset Map)

Dead Reckoning Indications

As a result of operating in DR Mode, all GPS-derived data is computed based upon an estimated position and is displayed as yellow text on the display to denote degraded navigation source information. This data includes the following:

- Navigation Status Box fields except Active Leg, TAS, and DTK
- GPS Bearing Pointer
- Wind data and pointers in the Wind Data Box on the PFD
- Current Track Indicator
- All Bearing Pointer Distances
- Active Flight Plan distances, bearings, and ETE values

Also, while the G950 is in DR Mode, the autopilot will couple to GPS for up to 20 minutes. Synthetic Vision, Terrain Proximity, TERRAIN-SVS, and TAWS-B are disabled. Additionally, the accuracy of all nearest information (airports, airspaces, and waypoints) is questionable. Finally, airspace alerts continue to function, but with degraded accuracy.

ANNUNCIATIONS & ALERTS

WARNING ANNUNCIATION

Annunciation Text	Alerts Window Message	Audio Alert
LH ENG FIRE	Left engine fire warning.	Repeating Tone
RH ENG FIRE	Right engine fire warning.	
BATT LO VOLT	Battery voltage is low.	
ESSENT LO VOLT	Essential bus voltage is low.	
LH MAIN LO VOLT	Left main bus voltage is low.	
RH MAIN LO VOLT	Right main bus voltage is low.	
LH OVERBOOST	Left engine pressure is high.	
RH OVERBOOST	Right engine pressure is high.	

CAUTION ANNUNCIATION

Annunciation Text	Alerts Window Message	Audio Alert
LH ALT OUT	Left alternator failed.	Single Chime
RH ALT OUT	Right alternator failed.	
LH FUEL PRES HI	Left engine fuel pressure is high.	
LH FUEL PRES LO	Left engine fuel pressure is low.	
RH FUEL PRES HI	Right engine fuel pressure is high.	
RH FUEL PRES LO	Right engine fuel pressure is low.	

SAFE OPERATING ANNUNCIATION

Annunciation Text	Alerts Window Message	Audio Alert
LH FUEL PUMP	Left fuel pump is on.	None
RH FUEL PUMP	Right fuel pump is on.	
LDG LIGHT ON	Landing light switch is on.	
PITOT HEAT ON	Pitot heating switch is on.	
STALL HEAT ON	Stall heating switch is on.	
STROBE LIGHT ON	Strobe light switch is on.	
PROP DE-ICE	Propeller de-ice switch is on.	
SURF DE-ICE	De-ice system is on.	
TAXI LIGHT ON	Taxi light switch is on.	

ALERT MESSAGE

Alerts Window Message	Audio Alert
PFD FAN FAIL – The cooling fan for the PFD is inoperative.	None
MFD FAN FAIL – The cooling fan for the MFD is inoperative.	None

TAWS-B ALERTS

Alert Type	PFD/MFD TAWS-B Page Annunciation	MFD Pop-Up Alert	Aural Message
Excessive Descent Rate Warning (EDR)	PULL UP	PULL-UP	"Pull Up"
Reduced Required Terrain Clearance Warning (RTC)	PULL UP	TERRAIN - PULL-UP * or TERRAIN AHEAD - PULL-UP	"Terrain, Terrain; Pull Up, Pull Up"* or "Terrain Ahead, Pull Up; Terrain Ahead, Pull Up"
Imminent Terrain Impact Warning (ITI)	PULL UP	TERRAIN AHEAD - PULL-UP or TERRAIN - PULL-UP *	Terrain Ahead, Pull Up; Terrain Ahead, Pull Up" or "Terrain, Terrain; Pull Up, Pull Up"*
Reduced Required Obstacle Clearance Warning (ROC)	PULL UP	OBSTACLE - PULL-UP * or OBSTACLE AHEAD - PULL-UP	"Obstacle, Obstacle; Pull Up, Pull Up"* or "Obstacle Ahead, Pull Up; Obstacle Ahead, Pull Up"
Imminent Obstacle Impact Warning (IOI)	PULL UP	OBSTACLE AHEAD - PULL-UP or OBSTACLE - PULL-UP *	"Obstacle Ahead, Pull Up; Obstacle Ahead, Pull Up" or "Obstacle, Obstacle; Pull Up, Pull Up"*
Reduced Required Terrain Clearance Caution (RTC)	TERRAIN	CAUTION - TERRAIN * or TERRAIN AHEAD	"Caution, Terrain; Caution, Terrain"* or "Terrain Ahead; Terrain Ahead"

Alert Type	PFD/MFD TAWS-B Page Annunciation	MFD Pop-Up Alert	Aural Message
Imminent Terrain Impact Caution (ITI)	TERRAIN	TERRAIN AHEAD or CAUTION – TERRAIN *	"Terrain Ahead; Terrain Ahead" or "Caution, Terrain; Caution, Terrain"*
Reduced Required Obstacle Clearance Caution (ROC)	TERRAIN	CAUTION – OBSTACLE * or OBSTACLE AHEAD	"Caution, Obstacle; Caution, Obstacle"* or "Obstacle Ahead; Obstacle Ahead"
Imminent Obstacle Impact Caution (IOI)	TERRAIN	OBSTACLE AHEAD or CAUTION – OBSTACLE *	"Obstacle Ahead; Obstacle Ahead" or "Caution, Obstacle; Caution, Obstacle"*
Premature Descent Alert Caution (PDA)	TERRAIN	TOO LOW – TERRAIN	"Too Low, Terrain"
Altitude Callout "500"	None	None	"Five-Hundred"
Excessive Descent Rate Caution (EDR)	TERRAIN	SINK RATE	"Sink Rate"
Negative Climb Rate Caution (NCR)	TERRAIN	DON'T SINK * or TOO LOW – TERRAIN	"Don't Sink"* or "Too Low, Terrain"

*Default setting for the P68 when more than one option is available

TAWS-B SYSTEM STATUS ANNUNCIATIONS

Alert Type	PFD/MFD Alert Annunciation	TAWS-B Page Annunciation	Aural Message
System Test in Progress	TAWS TEST	TAWS TEST	None
System Test Pass	None	None	"TAWS System Test OK"
TAWS Alerting is disabled	TAWS INH	None	None
MFD Terrain or Obstacle database unavailable or invalid. TAWS operating with PFD Terrain or Obstacle databases	None	TERRAIN DATABASE FAILURE	None
TAWS-B System Test Fail	TAWS FAIL	TAWS FAIL	"TAWS System Failure"
Terrain or Obstacle database unavailable or invalid, invalid software configuration, system audio fault	TAWS FAIL	TAWS FAIL	"TAWS System Failure"
No GPS position	TAWS N/A	NO GPS POSITION	"TAWS Not Available"
Excessively degraded GPS signal, Out of database coverage area	TAWS N/A	None	"TAWS Not Available"
Sufficient GPS signal received after loss	None	None	"TAWS Available"

VOICE ALERTS

Voice Alert	Description
"Minimums, minimums"	The aircraft has descended below the preset barometric minimum descent altitude.
"Vertical track"	The aircraft is one minute from Top of Descent. Issued only when vertical navigation is enabled.
"Traffic"	Played when a Traffic Advisory (TA) is issued (TIS).
"TIS Not Available"	The aircraft is outside the Traffic Information Service (TIS) coverage area.

Voice Alert	Description
"Traffic, Traffic"	Played when a Traffic Advisory (TA) is issued (TAS system).
"TAS System Test OK"	Played when the TAS system passes a pilot-initiated self test.
"TAS System Test Failed"	Played when the TAS system fails a pilot-initiated self test.

MFD & PFD MESSAGE ADVISORIES

Message	Comments
DATA LOST – Pilot stored data was lost. Recheck settings.	The pilot profile data was lost. System reverts to default pilot profile and settings. The pilot may reconfigure the MFD & PFDs with preferred settings, if desired.
XTALK ERROR – A flight display crosstalk error has occurred.	The MFD and PFDs are not communicating with each other. The G950 system should be serviced.
PFD1 SERVICE – PFD1 needs service. Return unit for repair.	The PFD and/or MFD self-test has detected a problem. The G950 system should be serviced.
MFD1 SERVICE – MFD1 needs service. Return unit for repair.	
MANIFEST – PFD1 software mismatch, communication halted.	The PFD and/or MFD has incorrect software installed. The G950 system should be serviced.
MANIFEST – MFD1 software mismatch, communication halted.	
PFD1 CONFIG – PFD1 config error. Config service req'd.	The PFD configuration settings do not match backup configuration memory. The G950 system should be serviced.
MFD1 CONFIG – MFD1 config error. Config service req'd.	The MFD configuration settings do not match backup configuration memory. The G950 system should be serviced.
SW MISMATCH – GDU software version mismatch. Xtalk is off.	The MFD and PFDs have different software versions installed. The G950 system should be serviced.
PFD1 COOLING – PFD1 has poor cooling. Reducing power usage.	The PFD and/or MFD is overheating and is reducing power consumption by dimming the display. If problem persists, the G950 system should be serviced.
MFD1 COOLING – MFD1 has poor cooling. Reducing power usage.	

MFD & PFD MESSAGE ADVISORIES (CONT.)

Message	Comments
PFD1 KEYSTK – PFD1 [key name] Key is stuck.	A key is stuck on the PFD and/or MFD bezel. Attempt to free the stuck key by pressing it several times. The G950 system should be serviced if the problem persists.
MFD1 KEYSTK – MFD [key name] Key is stuck.	
CNFG MODULE – PFD1 configuration module is inoperative.	The PFD1 configuration module backup memory has failed. The G950 system should be serviced.
PFD1 VOLTAGE – PFD1 has low voltage. Reducing power usage	The PFD1 voltage is low. The G950 system should be serviced.
MFD1 VOLTAGE – MFD1 has low voltage. Reducing power usage	The MFD voltage is low. The G950 system should be serviced.

DATABASE MESSAGE ADVISORIES

Message	Comments
MFD1 DB ERR – MFD1 navigation database error exists.	The MFD and/or PFD detected a failure in the navigation database. Attempt to reload the navigation database. If problem persists, the system should be serviced.
PFD1 DB ERR – PFD1 navigation database error exists.	
MFD1 DB ERR – MFD1 basemap database error exists.	The MFD and/or PFD detected a failure in the basemap database.
PFD1 DB ERR – PFD1 basemap database error exists.	
MFD1 DB ERR – MFD1 terrain database error exists.	The MFD and/or PFD detected a failure in the terrain database. Ensure that the terrain card is properly inserted in display. Replace terrain card. If problem persists, the system should be serviced.
PFD1 DB ERR – PFD1 terrain database error exists.	
MFD1 DB ERR – MFD1 terrain database missing.	The terrain database is present on another LRU, but is missing on the specified LRU.
PFD1 DB ERR – PFD1 terrain database missing.	

DATABASE MESSAGE ADVISORIES (CONT.)

Message	Comments
MFD1 DB ERR – MFD1 obstacle database error exists.	The MFD and/or PFD detected a failure in the obstacle database. Ensure that the data card is properly inserted. Replace data card. If problem persists, the system should be serviced.
PFD1 DB ERR – PFD1 obstacle database error exists.	
MFD1 DB ERR – MFD1 obstacle database missing.	The obstacle database is present on another LRU, but is missing on the specified LRU.
PFD1 DB ERR – PFD1 obstacle database missing.	
MFD1 DB ERR – MFD1 airport terrain database error exists.	The MFD and/or PFD detected a failure in the airport terrain database. Ensure that the data card is properly inserted. Replace data card. If problem persists, the system should be serviced.
PFD1 DB ERR – PFD1 airport terrain database error exists.	
MFD1 DB ERR – MFD1 airport terrain database missing.	The airport terrain database is present on another LRU, but is missing on the specified LRU.
PFD1 DB ERR – PFD1 airport terrain database missing.	
MFD1 DB ERR – MFD1 Safe Taxi database error exists.	The MFD and/or PFD detected a failure in the Safe Taxi database. Ensure that the data card is properly inserted. Replace data card. If problem persists, the system should be serviced.
PFD1 DB ERR – PFD1 Safe Taxi database error exists.	
MFD1 DB ERR – MFD1 Chartview database error exists.	The MFD detected a failure in the ChartView database (optional feature). Ensure that the data card is properly inserted. Replace data card. If problem persists, the system should be serviced.
MFD1 DB ERR – MFD1 FliteCharts database error exists.	The MFD detected a failure in the FliteCharts database (optional feature). Ensure that the data card is properly inserted. Replace data card. If problem persists, the system should be serviced.
MFD1 DB ERR – MFD1 Airport Directory database error exists.	The MFD detected a failure in the Airport Directory database. Ensure that the data card is properly inserted. Replace data card. If problem persists, the system should be serviced.

DATABASE MESSAGE ADVISORIES (CONT.)

Message	Comments
MFD1 DB ERR – MFD1 multiple database errors exists.	The MFD and/or PFD detected a failure in more than one database. If problem persists, the system should be serviced.
PFD1 DB ERR – PFD1 multiple database errors exists.	
DB MISMATCH – Navigation database version mismatch. Xtalk is off.	The PFD and MFD have different navigation database versions or types (Americas, European, etc.) installed. Crossfill is off. Check the AUX-SYSTEM STATUS Page for a database synchronization function not completed. After synchronization is complete, power must be turned off, then on.
DB MISMATCH – Standby Navigation database mismatch.	The PFD and MFD have different standby navigation database versions or types (Americas, European, etc.) installed. Check the AUX-SYSTEM STATUS Page for a database synchronization function not completed. After synchronization is complete, power must be turned off, then on.
DB MISMATCH – Terrain database version mismatch.	The PFD and MFD have different terrain database versions installed. Check the AUX-SYSTEM STATUS Page for a database synchronization function not completed. After synchronization is complete, power must be turned off, then on.
DB MISMATCH – Terrain database type mismatch.	The PFD and MFD have different terrain database types installed. Check the AUX-SYSTEM STATUS Page for a database synchronization function not completed. After synchronization is complete, power must be turned off, then on.
DB MISMATCH – Obstacle database version mismatch.	The PFD and MFD have different obstacle database versions installed. Check the AUX-SYSTEM STATUS Page for a database synchronization function not completed. After synchronization is complete, power must be turned off, then on.

DATABASE MESSAGE ADVISORIES (CONT.)

Message	Comments
DB MISMATCH – Airport Terrain database mismatch.	The PFD and MFD have different airport terrain databases installed. Check the AUX-SYSTEM STATUS Page for a database synchronization function not completed. After synchronization is complete, power must be turned off, then on.
NAV DB UPDATED – Active navigation database updated.	System has updated the active navigation database from the standby navigation database.
TERRAIN DSP – [PFD1 or MFD1] Terrain awareness display unavailable.	One of the terrain, airport terrain, or obstacle databases required for TAWS in the PFD or MFD is missing or invalid.

GMA 1347 MESSAGE ADVISORIES

Message	Comments
GMA1 FAIL – GMA1 is inoperative.	The audio panel self-test has detected a failure. The audio panel is unavailable. The G950 system should be serviced.
GMA1 CONFIG – GMA1 config error. Config service req'd.	The audio panel configuration settings do not match backup configuration memory. The G950 system should be serviced.
MANIFEST – GMA1 software mismatch, communication halted.	The audio panel has incorrect software installed. The G950 system should be serviced.
GMA1 SERVICE – GMA1 needs service. Return unit for repair.	The audio panel self-test has detected a problem. Certain audio functions may still be available, and the audio panel may still be usable. The G950 system should be serviced when possible.

GIA 63W MESSAGE ADVISORIES

Message	Comments
GIA1 CONFIG – GIA1 config error. Config service req'd.	The GIA1 and/or GIA2 configuration settings do not match backup configuration memory. The G950 system should be serviced.
GIA2 CONFIG – GIA2 config error. Config service req'd.	

GIA 63W MESSAGE ADVISORIES (CONT.)

Message	Comments
GIA1 CONFIG – GIA1 audio config error. Config service req'd.	The GIA1 and/or GIA2 have an error in the audio configuration. The G950 system should be serviced.
GIA2 CONFIG – GIA2 audio config error. Config service req'd.	
GIA1 COOLING – GIA1 temperature too low.	The GIA1 and/or GIA2 temperature is too low to operate correctly. Allow units to warm up to operating temperature.
GIA2 COOLING – GIA2 temperature too low.	
GIA1 COOLING – GIA1 over temperature.	The GIA1 and/or GIA2 temperature is too high. If problem persists, the G950 system should be serviced.
GIA2 COOLING – GIA2 over temperature.	
GIA1 SERVICE – GIA1 needs service. Return the unit for repair.	The GIA1 and/or GIA2 self-test has detected a problem in the unit. The G950 system should be serviced.
GIA2 SERVICE – GIA2 needs service. Return the unit for repair.	
HW MISMATCH – GIA hardware mismatch. GIA1 communication halted.	A GIA mismatch has been detected, where only one is SBAS capable.
HW MISMATCH – GIA hardware mismatch. GIA2 communication halted.	
MANIFEST – GIA1 software mismatch, communication halted.	The GIA1 and/or GIA 2 has incorrect software installed. The G950 system should be serviced.
MANIFEST – GIA2 software mismatch, communication halted.	
MANIFEST – COM1 software mismatch, communication halted.	The COM1 and/or COM2 has incorrect software installed. The system should be serviced.
MANIFEST – COM2 software mismatch, communication halted.	

GIA 63W MESSAGE ADVISORIES (CONT.)

Message	Comments
MANIFEST – NAV1 software mismatch, communication halted.	The NAV1 and/or NAV2 has incorrect software installed. The system should be serviced.
MANIFEST – NAV2 software mismatch, communication halted.	
COM1 TEMP – COM1 over temp. Reducing transmitter power.	The system has detected an over temperature condition in COM1 and/or COM2. The transmitter is operating at reduced power. If the problem persists, the G950 system should be serviced.
COM2 TEMP – COM2 over temp. Reducing transmitter power.	
COM1 SERVICE – COM1 needs service. Return unit for repair.	The system has detected a failure in COM1 and/or COM2. COM1 and/or COM2 may still be usable. The G950 system should be serviced when possible.
COM2 SERVICE – COM2 needs service. Return unit for repair.	
COM1 PTT – COM1 push-to-talk key is stuck.	The COM1 and/or COM2 external push-to-talk switch is stuck in the enable (or "pressed") position. Press the PTT switch again to cycle its operation. If the problem persists, the G950 system should be serviced.
COM2 PTT – COM2 push-to-talk key is stuck.	
COM1 RMT XFR – COM1 remote transfer key is stuck.	The COM1 and/or COM2 transfer switch is stuck in the enabled (or "pressed") position. Press the transfer switch again to cycle its operation. If the problem persists, the G950 system should be serviced.
COM2 RMT XFR – COM2 remote transfer key is stuck.	
COM1 CONFIG – COM1 config error. Config service req'd.	The COM1 and/or COM2 configuration settings do not match backup configuration memory. The G950 system should be serviced.
COM2 CONFIG – COM2 config error. Config service req'd.	
LOI – GPS integrity lost. Crosscheck with other NAVS.	GPS integrity is insufficient for the current phase of flight.
GPS NAV LOST – Loss of GPS navigation. Insufficient satellites.	Loss of GPS navigation due to insufficient satellites.
GPS NAV LOST – Loss of GPS navigation. Position error.	Loss of GPS navigation due to position error.

GIA 63W MESSAGE ADVISORIES (CONT.)

Message	Comments
GPS NAV LOST – Loss of GPS navigation. GPS fail.	Loss of GPS navigation due to GPS failure.
ABORT APR – Loss of GPS navigation. Abort approach.	Abort approach due to loss of GPS navigation.
APR DWNGRADE – Approach downgraded.	Vertical guidance generated by SBAS is unavailable, use LNAV only minimums.
TRUE APR – True north approach. Change HDG reference to TRUE.	Displayed after passing the first waypoint of a true north approach when the nav angle is set to 'AUTO'.
GPS1 SERVICE – GPS1 needs service. Return unit for repair.	A failure has been detected in the GPS1 and/or GPS2 receiver. The receiver may still be available. The G950 system should be serviced.
GPS2 SERVICE – GPS2 needs service. Return unit for repair.	
NAV1 SERVICE – NAV1 needs service. Return unit for repair.	A failure has been detected in the NAV1 and/or NAV2 receiver. The receiver may still be available. The G950 system should be serviced.
NAV2 SERVICE – NAV2 needs service. Return unit for repair.	
NAV1 RMT XFR – NAV1 remote transfer key is stuck.	The remote NAV1 and/or NAV2 transfer switch is stuck in the enabled (or "pressed") state. Press the transfer switch again to cycle its operation. If the problem persists, the G950 system should be serviced.
NAV2 RMT XFR – NAV2 remote transfer key is stuck.	
G/S1 FAIL – G/S1 is inoperative.	A failure has been detected in glideslope receiver 1 and/or receiver 2. The G950 system should be serviced.
G/S2 FAIL – G/S2 is inoperative.	
G/S1 SERVICE – G/S1 needs service. Return unit for repair.	A failure has been detected in glideslope receiver 1 and/or receiver 2. The receiver may still be available. The G950 system should be serviced when possible.
G/S2 SERVICE – G/S2 needs service. Return unit for repair.	

GEA 71 MESSAGE ADVISORIES

Message	Comments
GEA1 CONFIG – GEA1 config error. Config service req'd.	The GEA1 configuration settings do not match those of backup configuration memory. The G950 system should be serviced.
MANIFEST – GEA1 software mismatch, communication halted.	The #1 GEA 71 has incorrect software installed. The G950 system should be serviced.

GTX 33 MESSAGE ADVISORIES

Message	Comments
XPDR1 CONFIG – XPDR1 config error. Config service req'd.	The transponder configuration settings do not match those of backup configuration memory. The G950 system should be serviced.
MANIFEST – GTX1 software mismatch, communication halted.	The transponder has incorrect software installed. The G950 system should be serviced.
XPDR1 SRVC – XPDR1 needs service. Return unit for repair.	The #1 transponder should be serviced when possible.
XPDR1 FAIL – XPDR1 is inoperative.	There is no communication with the #1 transponder.

GRS 77 MESSAGE ADVISORIES

Message	Comments
AHRS1 TAS – AHRS1 not receiving valid airspeed.	The #1 AHRS is not receiving true airspeed from the air data computer. The AHRS relies on GPS information to augment the lack of airspeed. The G950 system should be serviced.
AHRS1 GPS – AHRS1 using backup GPS source.	The #1 AHRS is using the backup GPS path. Primary GPS path has failed. The G950 system should be serviced when possible.
AHRS1 GPS – AHRS1 not receiving any GPS information.	The #1 AHRS is not receiving any or any useful GPS information. Check AFMS limitations. The G950 system should be serviced.
AHRS1 GPS – AHRS1 not receiving backup GPS information.	The #1 AHRS is not receiving backup GPS information. The G950 system should be serviced.
AHRS1 GPS – AHRS1 operating exclusively in no-GPS mode.	The #1 AHRS is operating exclusively in no-GPS mode. The G950 system should be serviced.

GRS 77 MESSAGE ADVISORIES

Message	Comments
AHRS1 SRVC – AHRS1 Magnetic-field model needs update.	The #1 AHRS earth magnetic field model is out of date. Update magnetic field model when practical.
GEO LIMITS – AHRS1 too far North/ South, no magnetic compass.	The aircraft is outside geographical limits for approved AHRS operation. Heading is flagged as invalid.
MANIFEST – GRS1 software mismatch, communication halted.	The #1 AHRS has incorrect software installed. The G950 system should be serviced.

GMU 44 MESSAGE ADVISORIES

Message	Comments
HDG FAULT – AHRS1 magnetometer fault has occurred.	A fault has occurred in the #1 GMU 44. Heading is flagged as invalid. The AHRS uses GPS for backup mode operation. The G950 system should be serviced.
MANIFEST – GMU1 software mismatch, communication halted.	The GMU 44 has incorrect software installed. The G950 system should be serviced.

GWX 68 MESSAGE ADVISORIES

Message	Comments
GWX CONFIG – GWX config error. Config service req'd.	GWX 68 configuration settings do not match those of the GDU configuration. The system should be serviced.
GWX FAIL – GWX is inoperative.	The GDU is not recieving status packet from the GWX 68 or the GWX 68 is reporting a fault. The GWX 68 radar system should be serviced.
GWX SERVICE – GWX needs service. Return unit for repair.	A failure has been detected in the GWX 68. The GWX 68 may still be usable.
MANIFEST – GWX software mismatch, communication halted.	The GWX 68 has incorrect software installed. The system should be serviced.
WX ALERT – Possible severe weather ahead.	Possible severe weather detected within +/- 10 degrees of the aircraft heading at a range of 80 to 320 nm.

GDC 74A MESSAGE ADVISORIES

Message	Comments
MANIFEST – GDC1 software mismatch, communication halted.	The GDC 74A has incorrect software installed. The G950 system should be serviced.

GTS 800/820 MESSAGE ADVISORIES

Message	Comments
GTS CONFIG – GTS config error. Config service req'd.	The GTS and GDU have incompatible configurations. This alert is also set when the GTS has an invalid mode S address configured or the mode S address does not match both XPDR mode S addresses.
MANIFEST – GTS software mismatch, communication halted.	The GTS has incorrect software installed. The system should be serviced.

MISCELLANEOUS MESSAGE ADVISORIES

Message	Comments
FPL WPT LOCK – Flight plan waypoint is locked.	Upon power-up, the system detects that a stored flight plan waypoint is locked. This occurs when an navigation database update eliminates an obsolete waypoint. The flight plan cannot find the specified waypoint and flags this message. This can also occur with user waypoints in a flight plan that is deleted. Remove the waypoint from the flight plan if it no longer exists in any database, Or update the waypoint name/identifier to reflect the new information.
FPL WPT MOVE – Flight plan waypoint moved.	The system has detected that a waypoint coordinate has changed due to a new navigation database update. Verify that stored flight plans contain correct waypoint locations.
TIMER EXPIRD – Timer has expired.	The system notifies the pilot that the timer has expired.

MISCELLANEOUS MESSAGE ADVISORIES (CONT.)

Message	Comments
DB CHANGE – Database changed. Verify user modified procedures.	This occurs when a stored flight plan contains procedures that have been manually edited. This alert is issued only after an navigation database update. Verify that the user-modified procedures in stored flight plans are correct and up to date.
DB CHANGE – Database changed. Verify stored airways.	This occurs when a stored flight plan contains an airway that is no longer consistent with the navigation database. This alert is issued only after an navigation database update. Verify use of airways in stored flight plans and reload airways as needed.
FPL TRUNC – Flight plan has been truncated.	This occurs when a newly installed navigation database eliminates an obsolete approach or arrival used by a stored flight plan. The obsolete procedure is removed from the flight plan. Update flight plan with current arrival or approach.
LOCKED FPL – Cannot navigate locked flight plan.	This occurs when the pilot attempts to activate a stored flight plan that contains locked waypoint. Remove locked waypoint from flight plan. Update flight plan with current waypoint.
WPT ARRIVAL – Arriving at waypoint -[xxxx]	Arriving at waypoint [xxxx], where [xxxx] is the waypoint name.
STEEP TURN – Steep turn ahead.	A steep turn is 15 seconds ahead. Prepare to turn.
INSIDE ARSPC – Inside airspace.	The aircraft is inside the airspace.
ARSPC AHEAD – Airspace ahead less than 10 minutes.	Special use airspace is ahead of aircraft. The aircraft will penetrate the airspace within 10 minutes.
ARSPC NEAR – Airspace near and ahead.	Special use airspace is near and ahead of the aircraft position.
ARSPC NEAR – Airspace near – less than 2 nm.	Special use airspace is within 2 nm of the aircraft position.

MISCELLANEOUS MESSAGE ADVISORIES (CONT.)

Message	Comments
APR INACTV – Approach is not active.	The system notifies the pilot that the loaded approach is not active. Activate approach when required.
SLCT FREQ – Select appropriate frequency for approach.	The system notifies the pilot to load the approach frequency for the appropriate NAV receiver. Select the correct frequency for the approach.
SLCT NAV – Select NAV on CDI for approach.	The system notifies the pilot to set the CDI to the correct NAV receiver. Set the CDI to the correct NAV receiver.
PTK FAIL – Parallel track unavailable: bad geometry.	Bad parallel track geometry.
PTK FAIL – Parallel track unavailable: invalid leg type.	Invalid leg type for parallel offset.
PTK FAIL – Parallel track unavailable: past IAF.	IAF waypoint for parallel offset has been passed.
UNABLE V WPT – Can't reach current vertical waypoint.	The current vertical waypoint can not be reached within the maximum flight path angle and vertical speed constraints. The system automatically transitions to the next vertical waypoint.
VNV – Unavailable. Unsupported leg type in flight plan.	The lateral flight plan contains a procedure turn, vector, or other unsupported leg type prior to the active vertical waypoint. This prevents vertical guidance to the active vertical waypoint.
VNV – Unavailable. Excessive track angle error.	The current track angle error exceeds the limit, causing the vertical deviation to go invalid.
VNV – Unavailable. Excessive crosstrack error.	The current crosstrack exceeds the limit, causing vertical deviation to go invalid.
VNV – Unavailable. Parallel course selected.	A parallel course has been selected, causing the vertical deviation to go invalid.
NON WGS84 WPT – Do not use GPS navigation to [xxxx].	The position of the selected waypoint [xxxx] is not calculated based on the WGS84 map reference datum and may be positioned in error as displayed. Do not use GPS to navigate to the selected non-WGS84 waypoint.

MISCELLANEOUS MESSAGE ADVISORIES (CONT.)

Message	Comments
TRAFFIC FAIL – Traffic device has failed.	The system is no longer receiving data from the traffic system. The traffic device should be serviced.
FAILED PATH – A data path has failed.	A data path connected to the GDU, GSD 41, GDL 69A, or the GIA 63/W has failed.
MAG VAR WARN – Large magnetic variance. Verify all course angles.	The GDU's internal model cannot determine the exact magnetic variance for geographic locations near the magnetic poles. Displayed magnetic course angles may differ from the actual magnetic heading by more than 2°.
SVS – SVS DISABLED: Out of available terrain region.	Synthetic Vision is disabled because the aircraft is not within the boundaries of the installed terrain database.
SVS – SVS DISABLED: Terrain DB resolution too low.	Synthetic Vision is disabled because a terrain database of sufficient resolution (9 arc-second or better) is not currently installed.
SCHEDULER [#] – <message>.	Message criteria entered by the user.
CHECK CRS – Database course for LOC1 / [LOC ID] is [CRS]°.	Selected course for LOC1 differs from published localizer course by more than 10 degrees.
CHECK CRS – Database course for LOC2 / [LOC ID] is [CRS]°.	Selected course for LOC2 differs from published localizer course by more than 10 degrees.
[PFD1, or MFD1] CARD 1 REM – Card 1 was removed. Reinsert card.	The SD card was removed from the top card slot of the PFD or MFD. The SD card needs to be reinserted.
[PFD1, or MFD1] CARD 2 REM – Card 2 was removed. Reinsert card.	The SD card was removed from the bottom card slot of the PFD or MFD. The SD card needs to be reinserted.
[PFD1, or MFD1] CARD 1 ERR – Card 1 is invalid.	The SD card in the top card slot of the PFD or MFD contains invalid data.
[PFD1, or MFD1] CARD 2 ERR – Card 2 is invalid.	The SD card in the bottom card slot of the specified PFD or MFD contains invalid data.

FLIGHT PLAN IMPORT/EXPORT MESSAGES

In some circumstances, some messages may appear in conjunction with others.

Flight Plan Import/ Export Results	Description
'Flight plan successfully imported.'	A flight plan file stored on the SD card was successfully imported as a stored flight plan.
'File contained user waypoints only. User waypoints imported successfully. No stored flight plan data was modified.'	The file stored on the SD card did not contain a flight plan, only user waypoints. These waypoints have been saved to the system user waypoints. No flight plans stored in the system have been modified.
'No flight plan files found to import.'	The SD card contains no flight plan data.
'Flight plan import failed.'	Flight plan data was not successfully imported from the SD card.
'Flight plan partially imported.'	Some flight plan waypoints were successfully imported from the SD card, however others had errors and were not imported. A partial stored flight plan now exists in the system.
'File contained user waypoints only.'	The file stored on the SD card did not contain a flight plan, only user waypoints. One or more of these waypoints did not import successfully.
'Too many points. Flight plan truncated.'	The flight plan on the SD card contains more waypoints than the system can support. The flight plan was imported with as many waypoints as possible.
'Some waypoints not loaded. Waypoints locked.'	The flight plan on the SD card contains one or more waypoints that the system cannot find in the navigation database. The flight plan has been imported, but must be edited within the system before it can be activated for use.
'User waypoint database full. Not all loaded.'	The flight plan file on the SD card contains user waypoints. The quantity of stored user waypoints has exceeded system capacity, therefore not all the user waypoints on the SD card have been imported. Any flight plan user waypoints that were not imported are locked in the flight plan. The flight plan must be edited within the system before it can be activated for use.

Flight Plan Import/ Export Results	Description
'One or more user waypoints renamed.'	One or more imported user waypoints were renamed when imported due to naming conflicts with waypoints already existing in the system.
'Flight plan successfully exported.'	The stored flight plan was successfully exported to the SD card.
'Flight plan export failed.'	The stored flight plan was not successfully exported to the SD card. The SD card may not have sufficient available memory or the card may have been removed prematurely.

APPENDIX

PFD SOFTKEY MAP

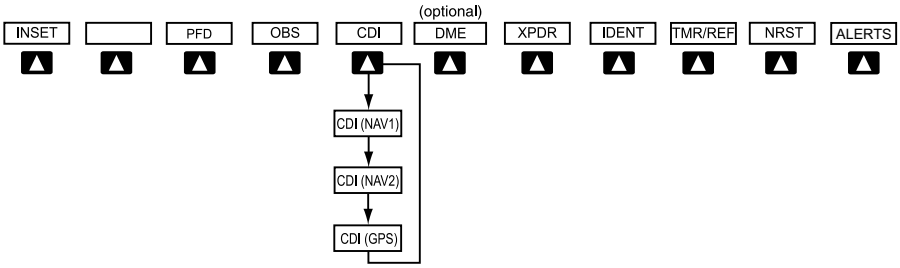

Top Level PFD Softkeys

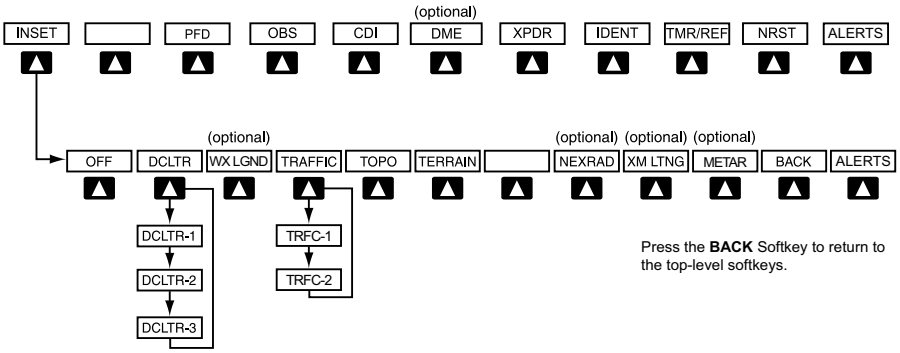

Inset Map Softkeys

INSET			Displays Inset Map in PFD lower left corner
	OFF		Removes Inset Map
	DCLTR (3)		Selects desired amount of map detail; cycles through declutter levels: DCLTR (No Declutter): All map features visible DCLTR-1: Declutters land data DCLTR-2: Declutters land and SUA data DCLTR-3: Removes everything except the active flight plan
	WX LGND		Displays icon and age on the Inset Map for the selected weather products (optional)

	TRAFFIC		Cycles through traffic display options: TRFC-1: Traffic displayed on inset map TRFC-2: Traffic Map Page is displayed in the inset map window
	TOPO		Displays topographical data (e.g., coastlines, terrain, rivers, lakes) and elevation scale on Inset Map
	TERRAIN		Displays terrain information on Inset Map
	NEXRAD		Displays NEXRAD weather and coverage information on Inset Map (optional feature)
	XM LTNG		Displays XM WX Satellite Weather lightning information on Inset Map (optional feature)
	METAR		Displays METAR flags on airport symbols shown on the Inset Map (optional)

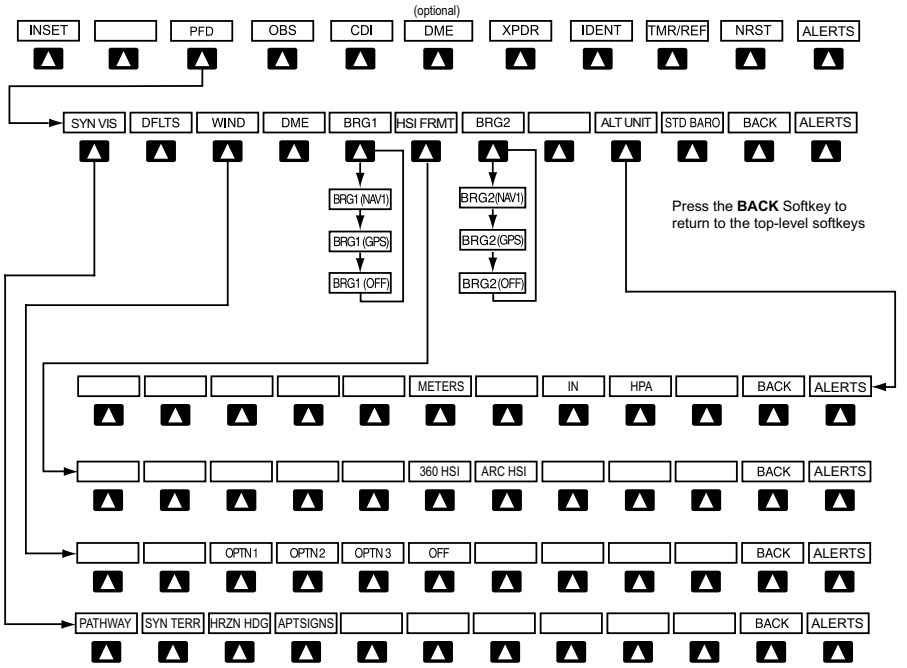

PFD Configuration Softkeys

PFD			Displays second-level softkeys for additional PFD configurations
	SYN VIS		Displays the softkeys for enabling or disabling Synthetic Vision features
		PATHWAY	Displays rectangular boxes representing the horizontal and vertical flight path of the active flight plan
		SYN TERR	Enables synthetic terrain depiction
		HRZN HDG	Displays compass heading along the Zero-Pitch line
		APTSIGNS	Displays position markers for airports within approximately 15 nm of the current aircraft position. Airport identifiers are displayed when the airport is within approximately 9 nm.
	DFLTS		Resets PFD to default settings, including changing units to standard
	WIND		Displays softkeys to select wind data parameters
		OPTN 1	Headwind/tailwind and crosswind arrows with numeric speed components
		OPTN 2	Wind direction arrow and numeric speed
		OPTN 3	Wind direction arrow with headwind/tailwind and crosswind speed components
		OFF	Information not displayed
	DME		Displays the DME Information Window
	BRG1		Cycles the Bearing 1 Information Window through NAV1 or GPS/waypoint identifier and GPS-derived distance information.
	HSI FRMT		Displays the HSI formatting softkeys
		360 HSI	Displays the HSI in a 360 degree format
		ARC HSI	Displays the HSI in an arc format

	BRG2		Cycles the Bearing 2 Information Window through NAV2 or GPS/ waypoint identifier and GPS-derived distance information.
	ALT UNIT		Displays softkeys for setting the altimeter and BARO settings to metric units
		METERS	When enabled, displays altimeter in meters
		IN	Press to display the BARO setting as inches of mercury
		HPA	Press to display the BARO setting as hectopacals
	STD BARO		Sets barometric pressure to 29.92 in Hg (1013 hPa)

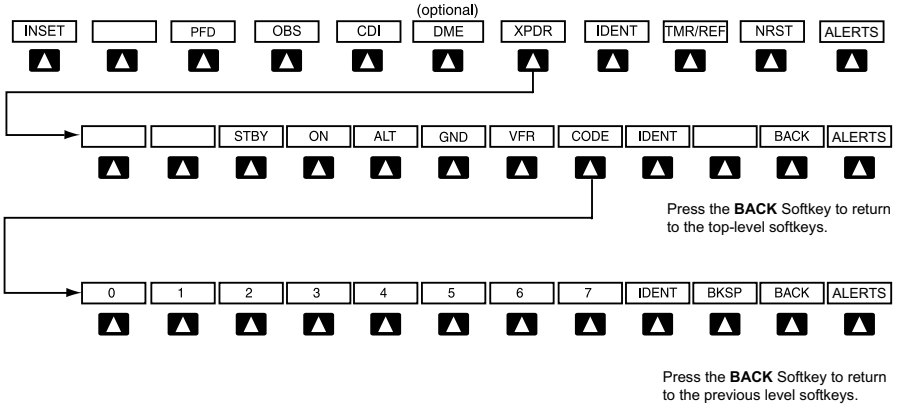

Transponder Softkeys

XPDR			Displays transponder mode selection softkeys
	STBY		Selects Standby Mode (transponder does not reply to any interrogations)
	ON		Selects Mode A (transponder replies to interrogations)

	ALT		Selects Mode C – Altitude Reporting Mode (transponder replies to identification and altitude interrogations)
	GND		Manually selects Ground Mode, the transponder does not allow Mode A and Mode C replies, but it does permit acquisition squitter and replies to discretely addressed Mode S interrogations.
	VFR		Automatically enters the VFR code (1200 in the U.S.A. only)
	CODE		Displays transponder code selection softkeys 0-7
	IDENT		Activates the Special Position Identification (SPI) pulse for 18 seconds, identifying the transponder return on the ATC screen
		0 — 7	Use numbers to enter code
		BKSP	Removes numbers entered, one at a time
IDENT			Activates the Special Position Identification (SPI) pulse for 18 seconds, identifying the transponder return on the ATC screen
TMR/REF			Displays Timer/References Window
NRST			Displays Nearest Airports Window
ALERTS			Displays Alerts Window

MFD SOFTKEY MAP

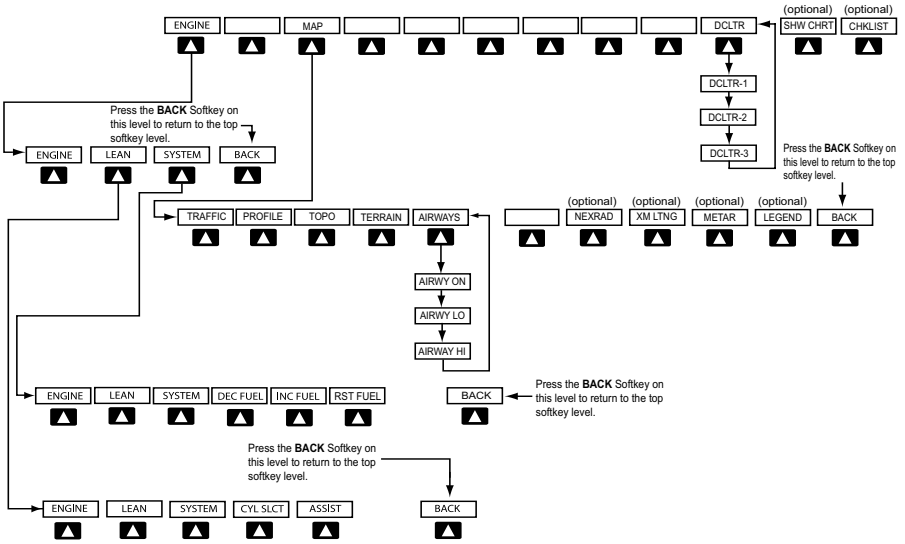

MFD Softkeys

ENGINE			Displays the **LEAN** and **SYSTEM** softkeys
	LEAN		Displays the engine leaning softkeys
		CYL SLCT	Selects the desired cylinder for monitoring
		ASSIST	Highlights the first cylinder that peaks and displays information for that cylinder
		BACK	Press to return to the top level softkeys
	SYSTEM		Displays fuel system softkeys
		DEC FUEL	Press to decrease fuel quantity in 1-gallon increments
		INC FUEL	Press to increase fuel quantity in 1-gallon increments
		RST FUEL	Press to reset to full fuel
		BACK	Press to return to the top level softkeys

MAP			Enables second-level Navigation Map softkeys
	TRAFFIC		Displays traffic information on Navigation Map
	PROFILE		Displays/removes Profile View on Navigation Map Page
	TOPO		Displays topographical data (e.g., coastlines, terrain, rivers, lakes) and elevation scale on Navigation Map
	TERRAIN		Displays terrain information on Navigation Map
	AIRWAYS		Displays airways on the map; cycles through the following: AIRWAYS: No airways are displayed AIRWY ON: All airways are displayed AIRWY LO: Only low altitude airways are displayed AIRWY HI: Only high altitude airways are displayed
	NEXRAD		Displays NEXRAD weather and coverage information on Navigation Map (optional feature)
	XM LTNG		Displays XM WX Satellite Weather lightning information on Navigation Map (optional feature)
	METAR		Displays METAR flags on airport symbols shown on the Navigation Map
	LEGEND		Displays the legend for the selected weather products. Available only when NEXRAD, XM LTNG, and/or METAR softkeys are selected.
	BACK		Returns to top-level softkeys

DCLTR			Selects desired amount of map detail; cycles through declutter levels: DCLTR (No Declutter): All map features visible DCLTR-1: Declutters land data DCLTR-2: Declutters land and SUA data DCLTR-3: Removes everything except the active flight plan
SHW CHRT			When available, displays optional airport and terminal procedure charts
CHKLIST			When available, displays optional checklists

LOADING UPDATED DATABASES

CAUTION: *Never disconnect power to the system when loading a database. Power interuption during the database loading process could result in maintenance being required to reboot the system.*

NOTE: *When loading database updates, the 'DB Mismatch' message will be displayed until database synchronization is complete, followed by turning system power off, then on. Synchronization can be monitored on the AUX-SYSTEM STATUS Page.*

In some cases it may be necessary to obtain an unlock code from Garmin in order to make the database product functional. It may also be necessary to have the system configured by a Garmin authorized service facility in order to use some database features.

If an error occurs during synchronization, an error message will be displayed, followed by the affected display in the Sync Status section of the Database Window. If synchronization completes on one display, but an error occurs on another, the error message will be displayed with the affected diaplays listed after it. When an error message is displayed, the problem must be corrected before synchronization can be completed. A power cycle is required to restart synchronization when 'Card Full' or 'Err' is shown.

Error Message	Description
Canceled	Database synchronization has been canceled by removing the bottom SD card in display being updated
Card Full	SD card does not contain sufficient memory
Err	Displayed for all other errors that may cause the synchronization process to be halted
Timeout	System timed-out prior to the database transfer completing

Loading Garmin Database Updates

1) With system power OFF, remove the MFD database card from the bottom card slot of the MFD.

2) Update the Garmin databases on the MFD card.

3) Insert the MFD database card into the bottom card slot of the MFD.

4) Apply power to the system, check that the databases are initialized and displayed on the power-up screen. When updating the terrain and FliteCharts databases, a 'Verifying' message may be seen. If this message is present, wait for the system to finish loading before proceeding to step 5.

5) Acknowledge the Power-up Page agreement by pressing the **ENT** Key or the right most softkey.

6) Turn the large **FMS** Knob to select the AUX Page group on the MFD.

7) Turn the small **FMS** Knob to select the System Status Page.

8) Monitor the Sync Status in the Database Window. Wait for all databases to complete synching, indicated by 'Complete' being displayed.

9) Remove and reapply power to the system.

10) Turn the large **FMS** Knob to select the AUX Page group on the MFD.

11) Turn the small **FMS** Knob to select the System Status Page.

12) Press the Display Database Selection Softkey to show database information for each display (**MFD1 DB**, **PFD1 DB**). Verify the correct database cycle information is shown for each database for each display.

Loading the Jeppesen Navigation Database as the Active Navigation Database

NOTE: *Loading the Jeppesen navigation database as the active database prior to its effective date will result in the expiration date on the power-up screen and the effective date on the AUX-System Status Page being displayed in yellow.*

NOTE: *After the navigation database is loaded or copied, the top SD card may be removed.*

1) With the system OFF, insert the SD card containing the new navigation database version into the top card slot of the display (PFD or MFD) to be updated (label of SD card facing left).

2) Turn the system ON. A prompt is displayed in the upper left corner of the display:

3) Press the **NO** Softkey to proceed to loading the active database.

4) A prompt similar to the following is displayed. Press the **YES** Softkey to update the active navigation database.

5) After the update completes, the display starts in normal mode.

6) Turn the system OFF and remove the SD card from the top card slot.

7) Repeat steps 1 through 6 for the other displays (PFD or MFD).

8) Apply power to the system and press the **ENT** Key to acknowledge the startup screen.

9) Turn the large **FMS** Knob to select the AUX Page group on the MFD.

10) Turn the small **FMS** Knob to select the System Status Page.

11) Press the Display Database Selection Softkey to show active navigation database information for each display (**MFD1 DB**, **PFD1 DB**). Verify the correct active navigation database cycle information is shown for each display.

Loading the Jeppesen Navigation Database as the Standby Navigation Database

NOTE: *After the navigation database is loaded or copied, the top SD card may be removed.*

1) With the system OFF, insert the SD card containing the new navigation database version into the top card slot of the MFD.
2) Verify that an SD card is inserted in the bottom slot of each PFD and the MFD.
3) Turn the system ON. A prompt is displayed.
4) Press the **YES** Softkey. The navigation database is copied to the SD card in the bottom card slot of the MFD.
5) After the navigation database files are copied to the bottom SD card, press any key to continue, as instructed.
7) Again, press any key to continue as instructed on the display.
8) Press the **NO** Softkey. The display now starts in normal mode. Since the database effective date is not yet valid, it should not be loaded as the active database. The display now starts in normal mode. Do not remove power while the display is starting.
9) Press the **ENT** Key to acknowledge the startup screen.
10) Turn the large **FMS** Knob to select the AUX Page group on the MFD.
11) Turn the small **FMS** Knob to select the System Status Page.
12) The new database is copied to the SD card in the bottom card slot of each PFD. Progress can be monitored in the SYNC STATUS field. When copying is finished, 'Complete' is displayed.

NOTE: *During the synchronization process, version differences between standby navigation databases will exist. This will result in the system displaying a 'DB Mismatch' alert for the standby navigation databases. This alert will remain until the next power cycle.*

13) Turn system power OFF.
14) Remove the SD card from the top card slot of the MFD.
15) Turn system power ON.
16) Press the **ENT** Key to acknowledge the startup screen.
17) Turn the large **FMS** Knob to select the AUX Page group on the MFD.
18) Turn the small **FMS** Knob to select the System Status Page.
19) Press the Display Database Selection Softkey to show standby navigation database information for each display (**MFD1 DB**, **PFD1 DB**). Verify the correct standby navigation database cycle information is shown for each display.

Magnetic Field Variation Database Update

At startup, the system compares this version of the MV DB with that presently being used by the AHRS (GRS). If the system determines the MV DB needs to be updated, a prompt is displayed on the Navigation Map Page, as shown in the following figure.

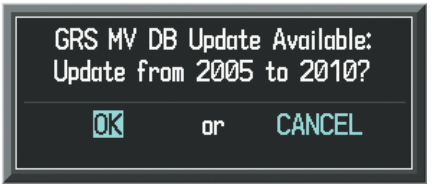

GRS Magnetic Field Variation Database Update Prompt

Loading the magnetic field variation database update:

With 'OK' highlighted, as shown in the previous figure, press the **ENT** Key on the MFD. A progress monitor is displayed as shown in the following figure.

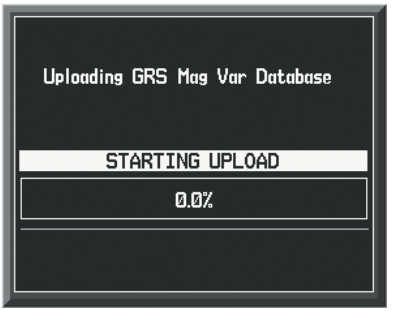

Uploading Database to GRS

A

Activate a flight plan 16
Active Channel 55
Active database 92
Active Navigation Database 92
ADF 9, 10, 60
AHRS 75, 76
Airport Signs 51, 52
Airways 89
Alert messages 76
ALT 41
Altitude mode 42
Altitude volume 41
Antenna stabilization 49
Antenna tilt 47
AOPA's Airport Directory 54
Assist 8
Audio panel controls
NAV1, NAV2 10

B

Barometric Altitude Minimums 2
Barometric pressure 86
Bearing line 47, 48

C

CDI 1, 10, 79
Channel Presets 56
ChartView 52, 53
Clearance player 10
Clearance Recorder 10
Code selection softkeys 9
COM 9, 10, 59

D

DB Mismatch 90, 93
DCLTR Softkey 52
Dead Reckoning 61
Declutter 60, 83, 90
Direct-to 15
DME 9, 10
DR mode 61, 62

E

Edit a flight plan 29
Enable Terrain 44
Endurance 6

F

Flight path marker 51
Flight plan import/export messages 81
FliteCharts® 52, 53
Frequency Transfer 10
Fuel remaining 6
Fuel used 6

G

Gain 48

H

HF 9
Horizon heading 51
Horizontal scan 47

I

Inhibit 44, 45
Inhibit TAWS 45
Inhibit Terrain 44
Inset Map 83, 84
Intercom isolation 11
IOI 64, 65

J

Jeppesen 53

M

Map panning 38
Message advisories 67–80
METAR 37
Minimums 66
MKR/MUTE 10
Mode S 87
Mode selection softkeys 9
Multi Function Display (MFD)
  Softkeys 88

N

NAV 10
NAV1 1, 10
NAV2 1, 10
Navigation database 17, 18, 68, 77, 78
NEXRAD 37, 84, 89

O

OBS 2
Obstacles 70, 71, 72

P

Pathways 51, 52

R

Reversionary mode 59
ROC 64, 65

S

SafeTaxi® 51, 52
SBAS 34, 44, 46, 61, 72, 74
Sector scan 48
STAB 49
Standby 46
Standby Navigation Database 92
Store Flight Plan 29
SVS 51, 80
SVS Terrain 51
Synchronization 91
SYNC Status 93
Synthetic Vision System 51

T

TA 66, 67
TAF 37
TAS 41, 42, 75
TAWS 44, 45, 46, 64
Terrain 42, 43, 44, 70, 84, 89
Terrain-SVS 13, 43, 44
Tilt line 47
Timer 77
Topographical data 84, 89
Traffic 37, 41, 89
Traffic advisory 40
Traffic Advisory 66, 67
Traffic map page 41, 42, 43
Transponder 9, 86, 87

V

Vertical speed guidance 18
Vertical track 66
VNV 15, 60, 79

W

WATCH® 49
Waypoint Selection Submenu 25, 26
Weather Attenuated Color Highlight 49
Weather radar 46
Wind data 85

X

XM Weather Data Link 37, 38
XM WX lightning 84, 89
XM WX weather 37

Garmin International, Inc.
1200 East 151st Street
Olathe, KS 66062, U.S.A.
p: 913.397.8200 f: 913.397.8282

Garmin AT, Inc.
2345 Turner Road SE
Salem, OR 97302, U.S.A.
p: 503.391.3411 f: 503.364.2138

Garmin (Europe) Ltd
Liberty House, Bulls Copse Road
Hounsdown Business Park
Southampton, SO40 9RB, U.K.
p: 44/0870.8501241 f: 44/0870.8501251

Garmin Corporation
No. 68, Jangshu 2nd Road
Shijr, Taipei County, Taiwan
p: 886/2.2642.9199 f: 886/2.2642.9099

www.garmin.com

© 2011 Garmin Ltd. or its subsidiaries

190-01326-00 Rev. A